


ASSEMBLY INSTRUCTION

BASE CABINET WITH SINGLE DOOR & DRAWER

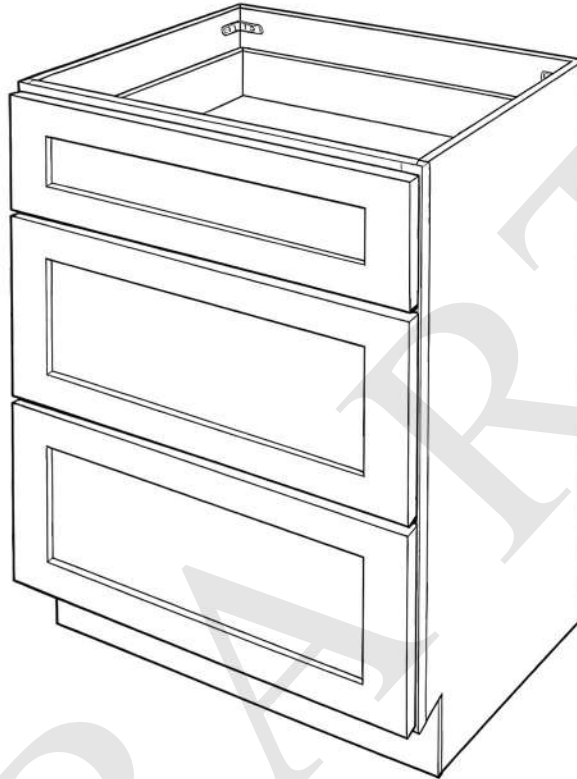

Cabinet Model

3DB12, 3DB15, 3DB18, 3DB21,
3DB24, 3DB30, 3DB36

Cabinet Style

Shaker Door Style Framed Cabinets



NOTE*

See our cabinet assembly videos on our YouTube Channel

<http://www.youtube.com/@rarartacabinets>


Inspect all panels and hardware to ensure you have everything needed.

We recommend laying the panels on flat soft base to protect the finish when assembling.

Pre-Sales: service@rarartacabinets.com


After-Sales: logistics@rarartacabinets.com

Parts List

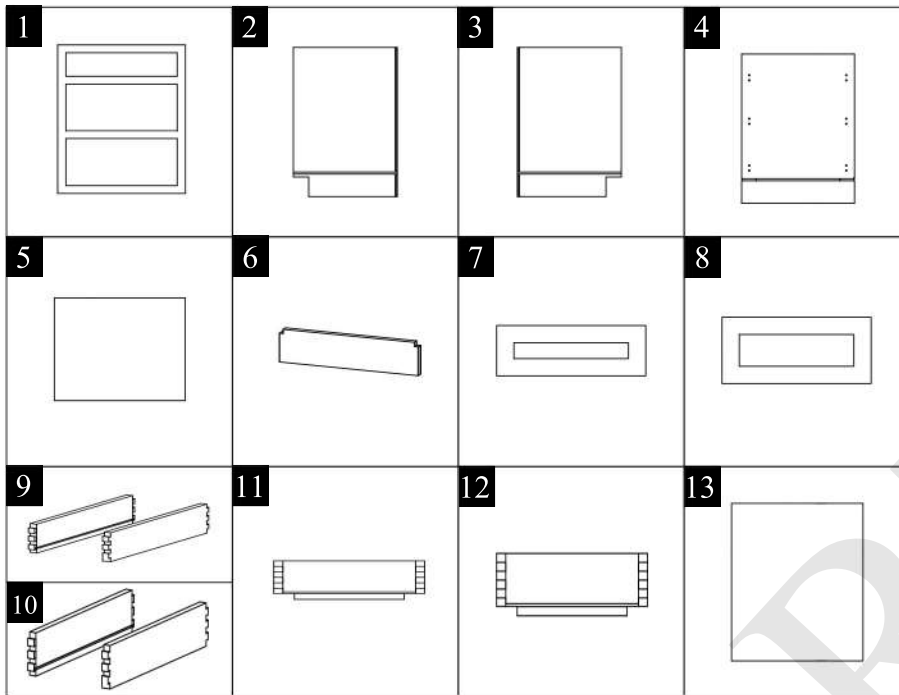


- 1** Face Frame
- 2** Left Panel
- 3** Right Panel
- 4** Back Panel
- 5** Bottom Panel
- 6** Toe Kick
- 7** Top Drawer Front Panel
- 8** Bottom Drawer Front Panel x2
- 9** Top Drawer Sides Panel x2
- 10** Bottom Drawer Sides Panel x4
- 11** Top Drawer Back Panel
- 12** Bottom Drawer Back Panel x2
- 13** Drawer Botom Panel x3

Hardware list

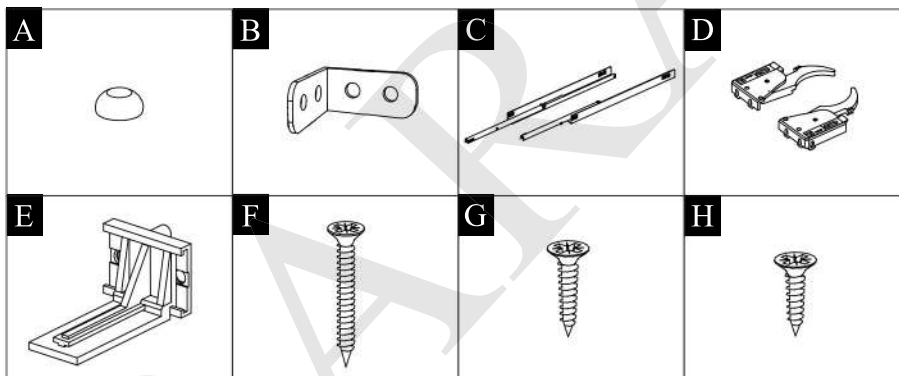


- A** Clear Rubber Bumpers
- B** Metal L Brackets
- C** Drawer Glides
- D** L/R Locking Drawer Glides
- E** Glide Rail Brackets
- F** Large Screws 1 3/16"
- G** Medium Screws 5/8"
- H** Small Screws 9/16"

Tools Required

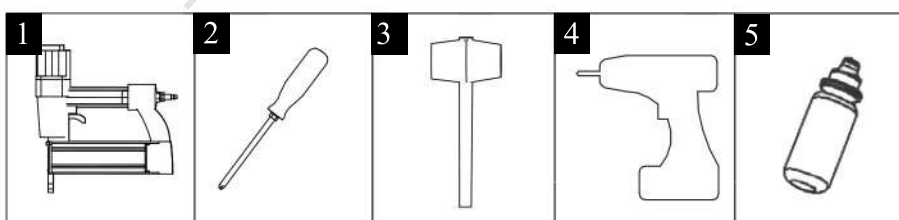


- 1** Nailer
- 2** Screwdriver
- 3** Rubber Mallet
- 4** Drill
- 5** Glue


Step1: Position the Back Panel face-down on a flat surface. Position the Glide Rail Brackets as shown and insert the Large Screws into the pre-drilled holes.

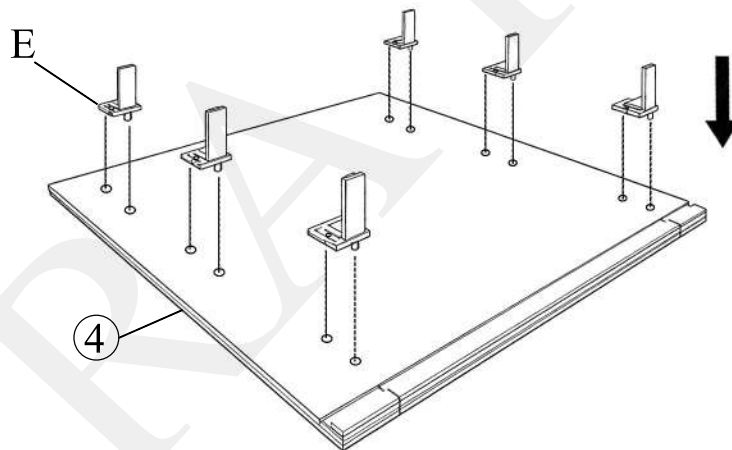


Step2: Secure the Glide Rail Brackets to the Back Panel using the Small Screws.

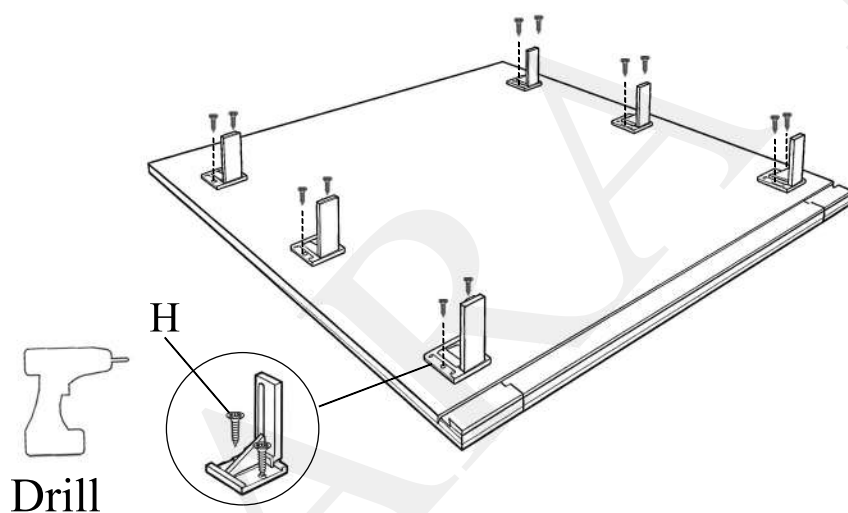


Step3: Apply glue to the grooves of the Left and Right Panels.

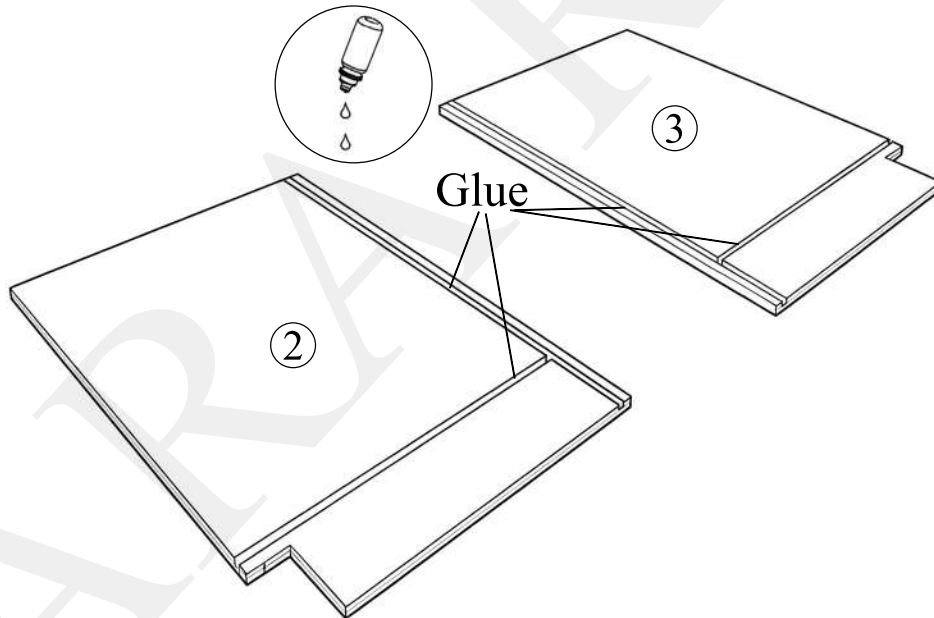


Step4: Insert the Back Panel and bottom Panels into the grooves of the Right Side Panel.

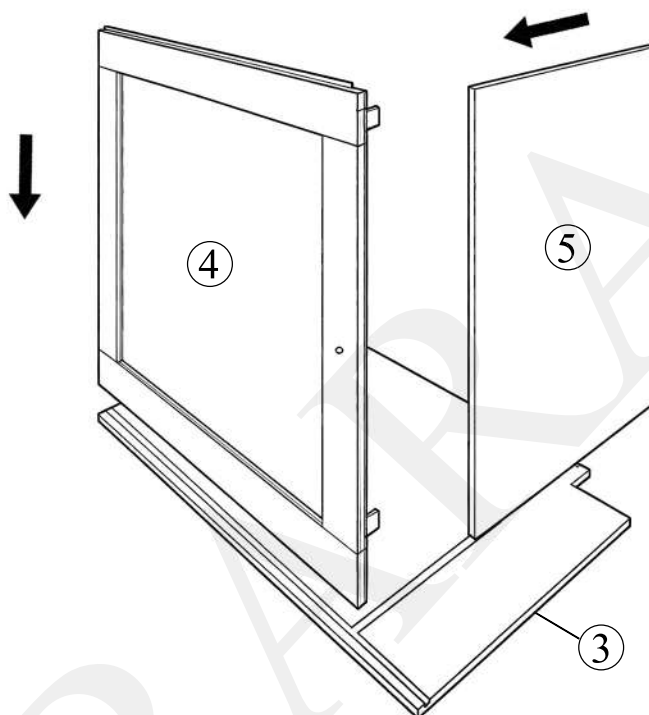


Step5: Position the Left Side Panel assembly. Secure the Back Panel to the Bottom Panel using the Large Screws.

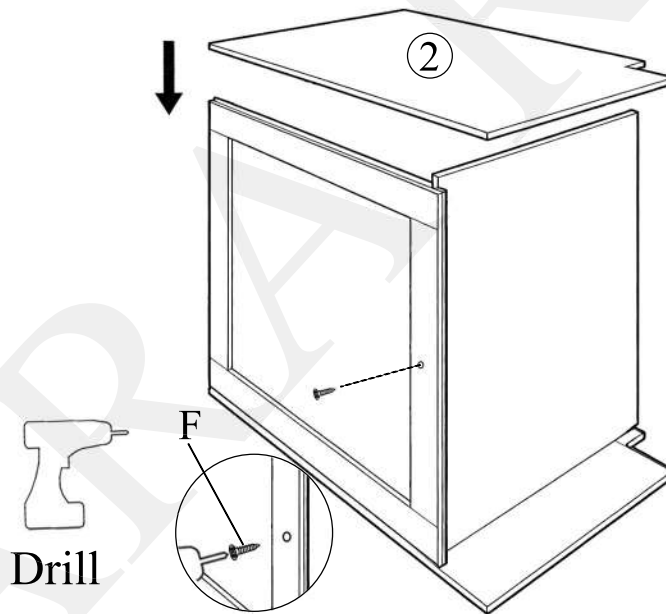


Step6: Fix the Side Panels using a Nailer.

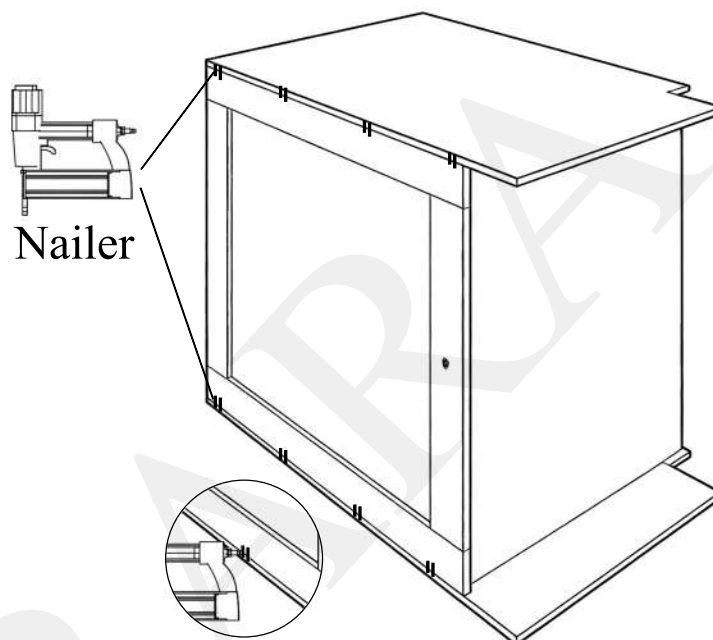


Step7: Apply glue to the grooves of the Face Frame.

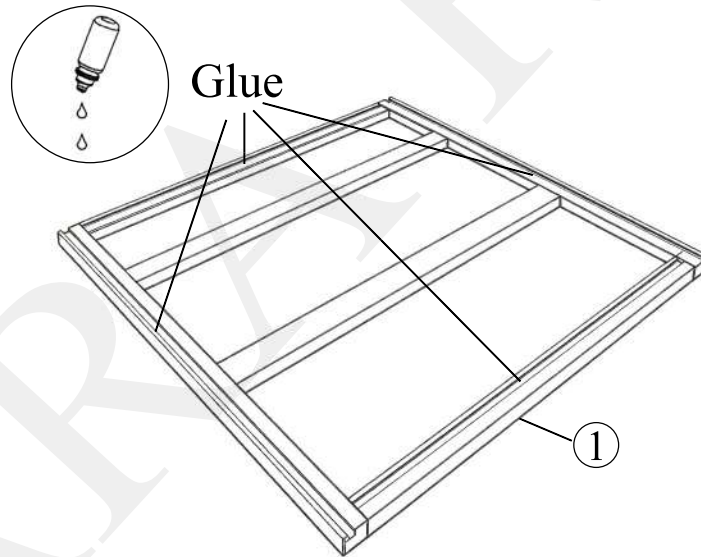


Step8: Position the Face Frame onto the cabinet assembly and align it with the cabinet edges.

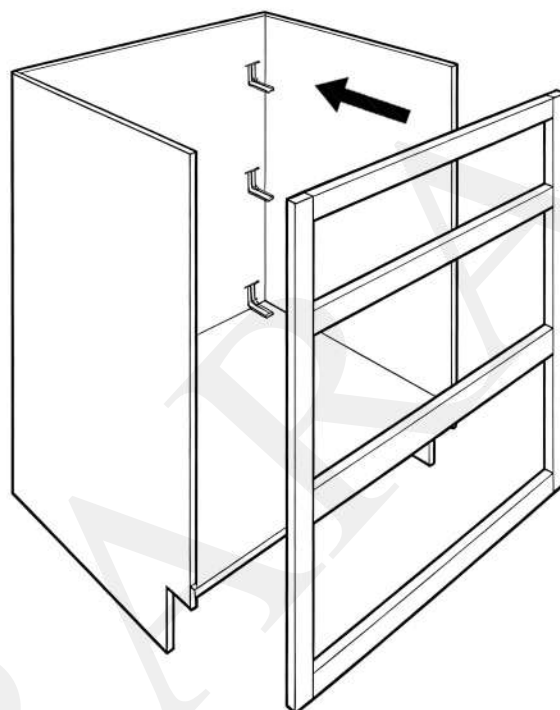


Step9: Secure the Face Frame to the cabinet using a nailer.

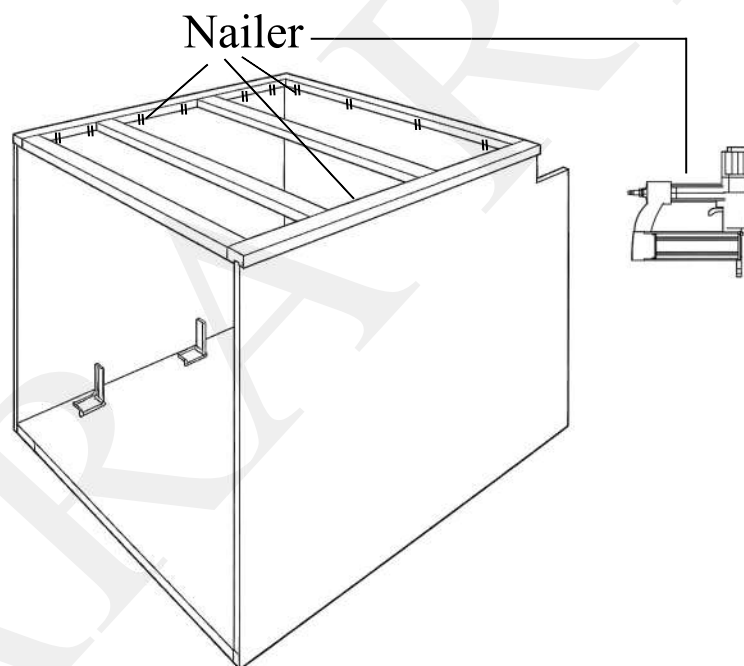


Step10: Attach the Toe Kick to the cabinet. Fasten it with a nailer. Place the Metal L Brackets at the the corners of the cabinet and Secure them with Small Screws.

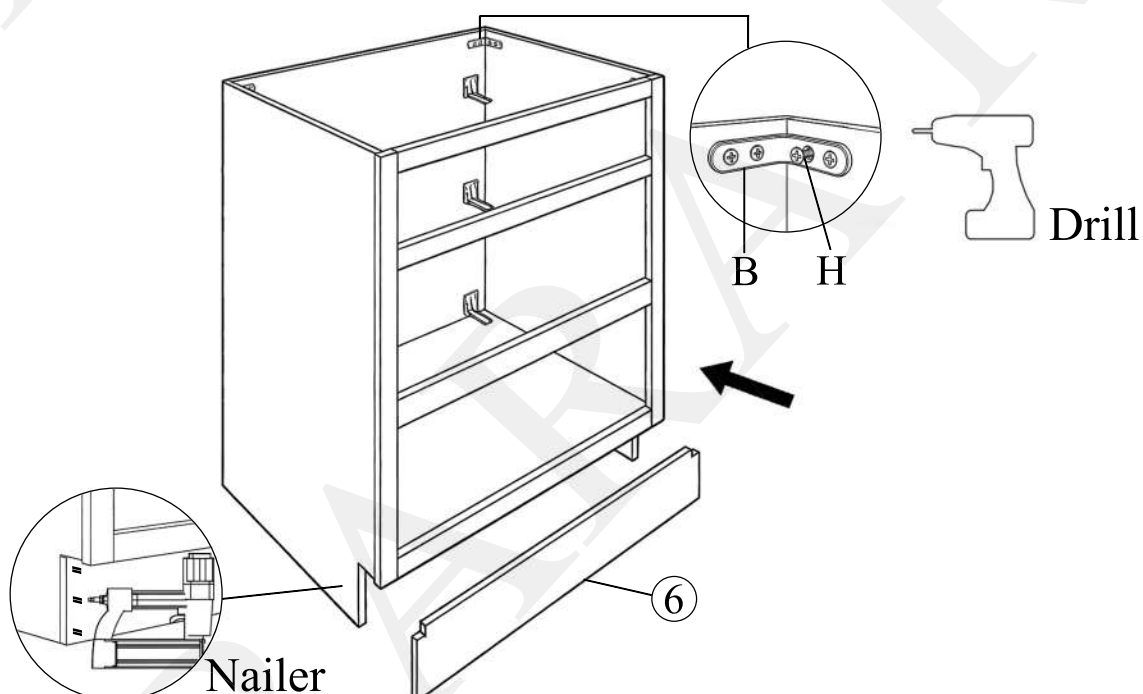


Step11: Install the Drawer Glides inside the cabinet. Secure the glides using the Medium Screws.

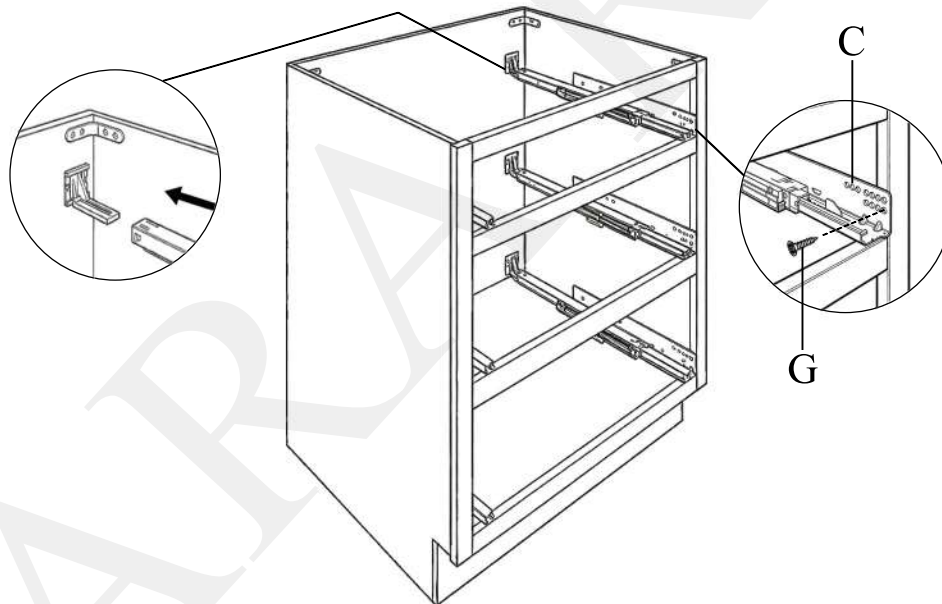


Step12: Position the Drawer Bottom Panel between the Drawer Side Panel and Drawer Front Panel. Align the panels and tap them into place with a Rubber Mallet.

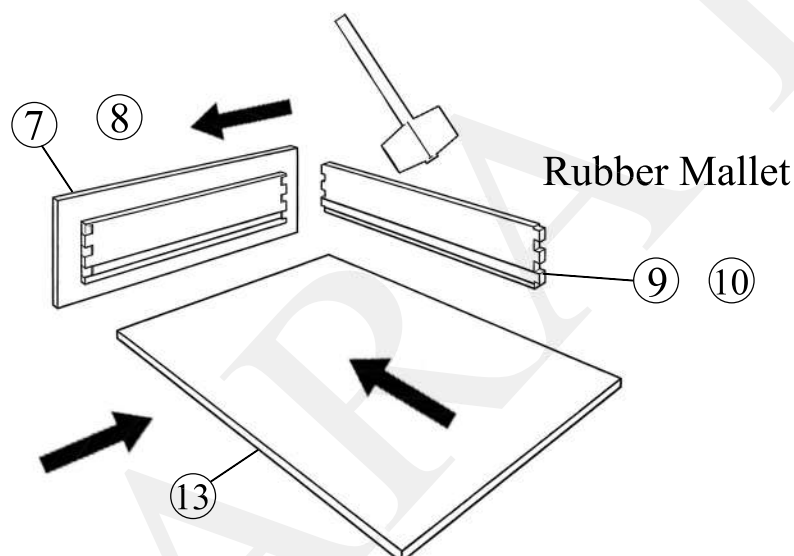


Step13: Align the Drawer Side Panel with the Drawer Bottom Panel and tap them into place using a Rubber Mallet.

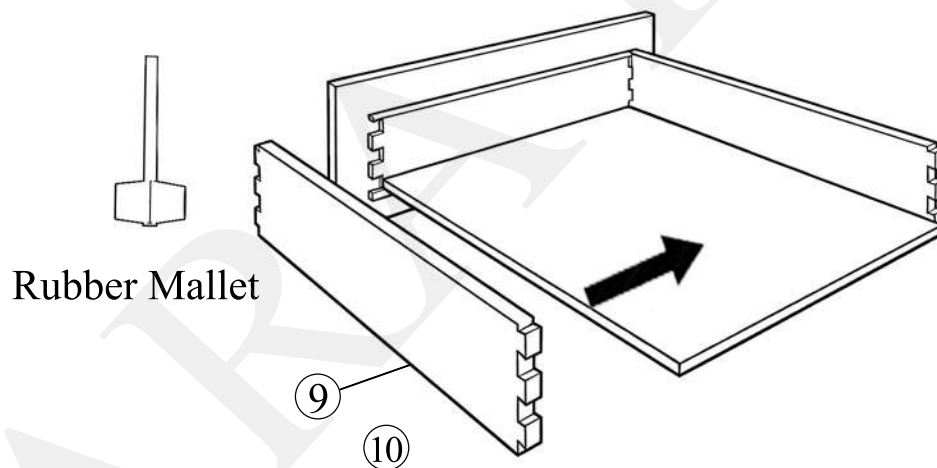


Step14: Insert the Drawer Back Panel onto the drawer. Align the joints and tap the panel into place with a Rubber Mallet.

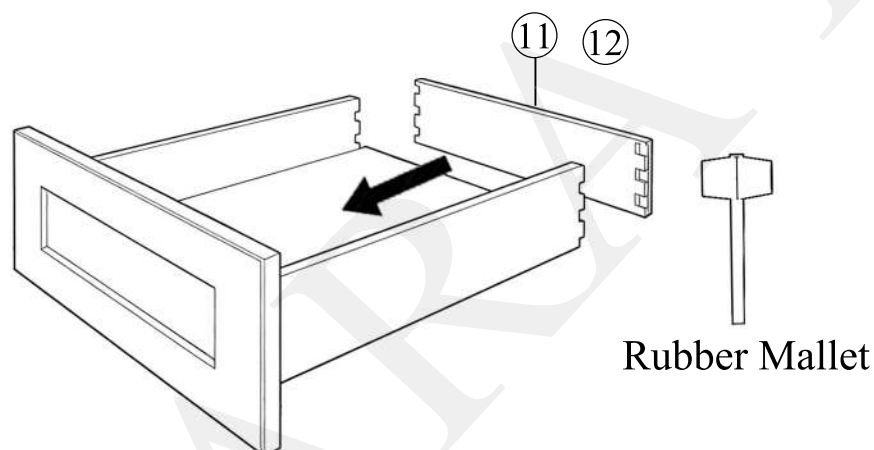


Step15: Install the Left and Right Locking Drawer Glides on the drawer assembly. Secure the glides using the Small Screws.

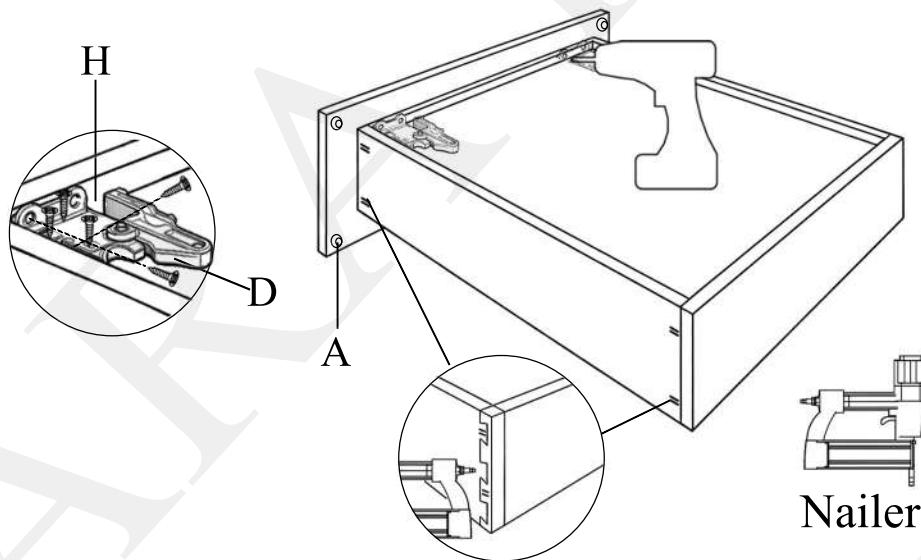


Step16: Pull the Drawer Glides forward. Position the drawer on the glides and slide it into the cabinet until the locking mechanism engages.

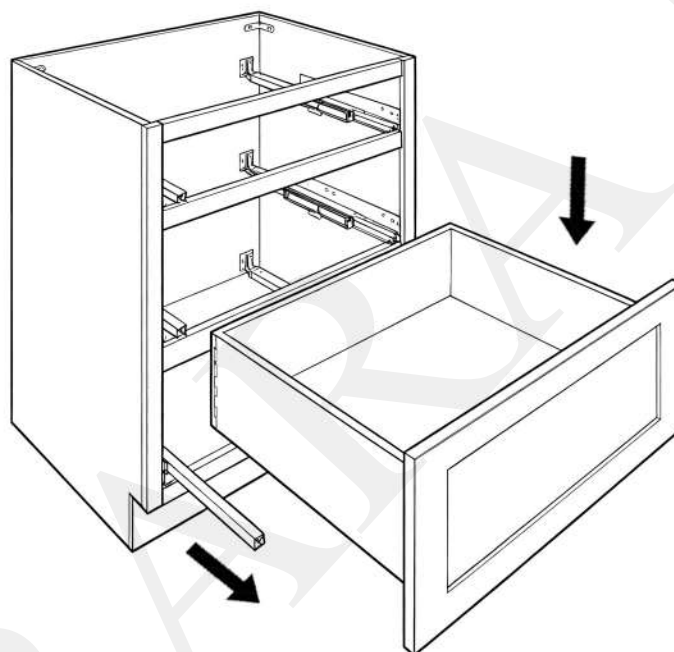

Step17: Repeat Step 16 to install the second drawer.

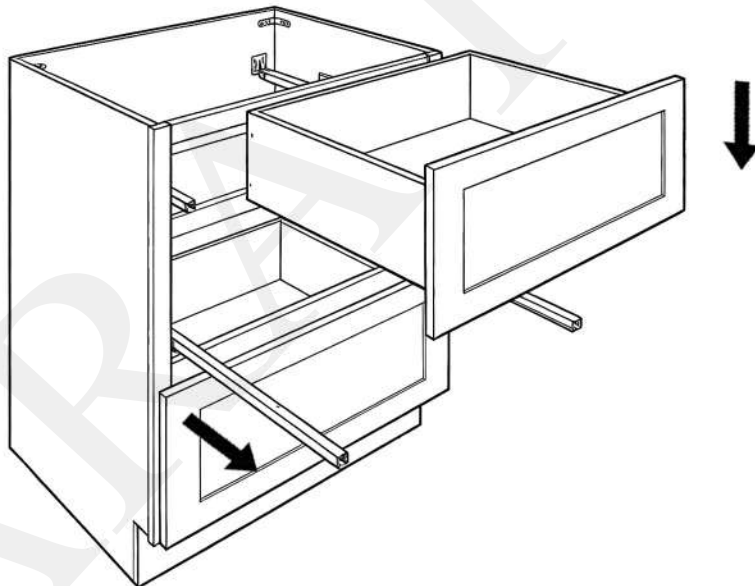

Step18: Repeat Step 16 to install the third drawer.

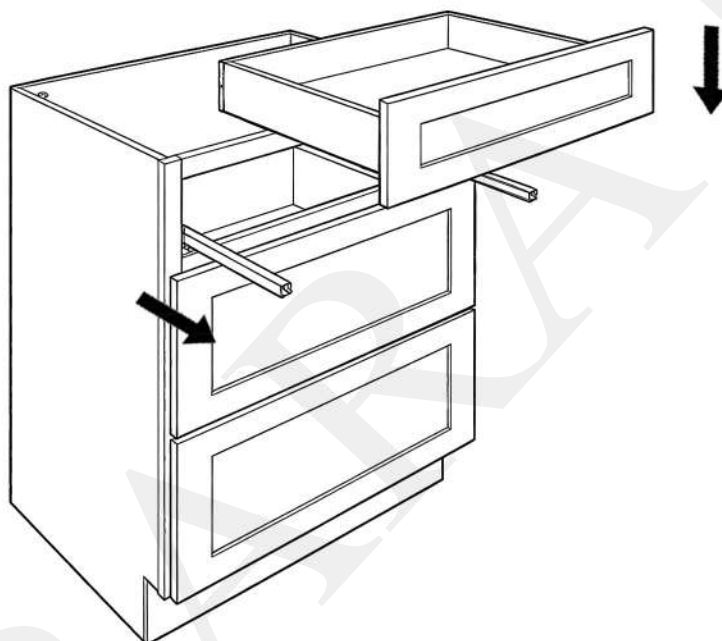

Step19: Pull out all three drawers to verify that they are properly installed and operate smoothly.

