


ASSEMBLY INSTRUCTION

BASE CABINET WITH SINGLE DOOR & DRAWER

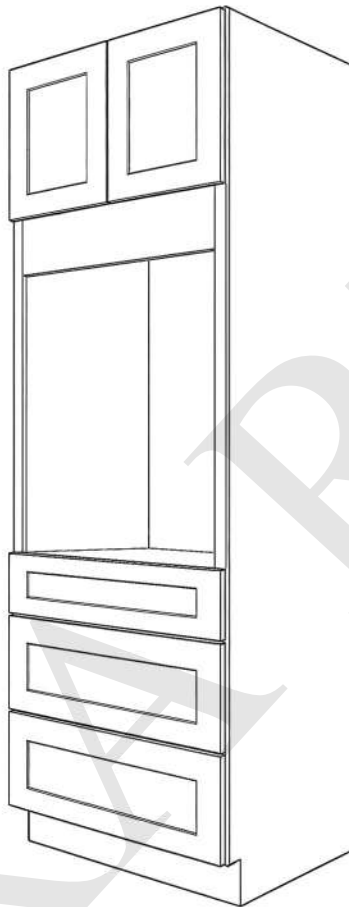

Cabinet Model

OC338424, OC339024, O339624

Cabinet Style

Shaker Door Style Framed Cabinets



NOTE*

See our cabinet assembly videos on our YouTube Channel

<http://www.youtube.com/@rarartacabinets>


Inspect all panels and hardware to ensure you have everything needed.

We recommend laying the panels on flat soft base to protect the finish when assembling.

Pre-Sales: service@rarartacabinets.com


After-Sales: logistics@rarartacabinets.com

Parts List

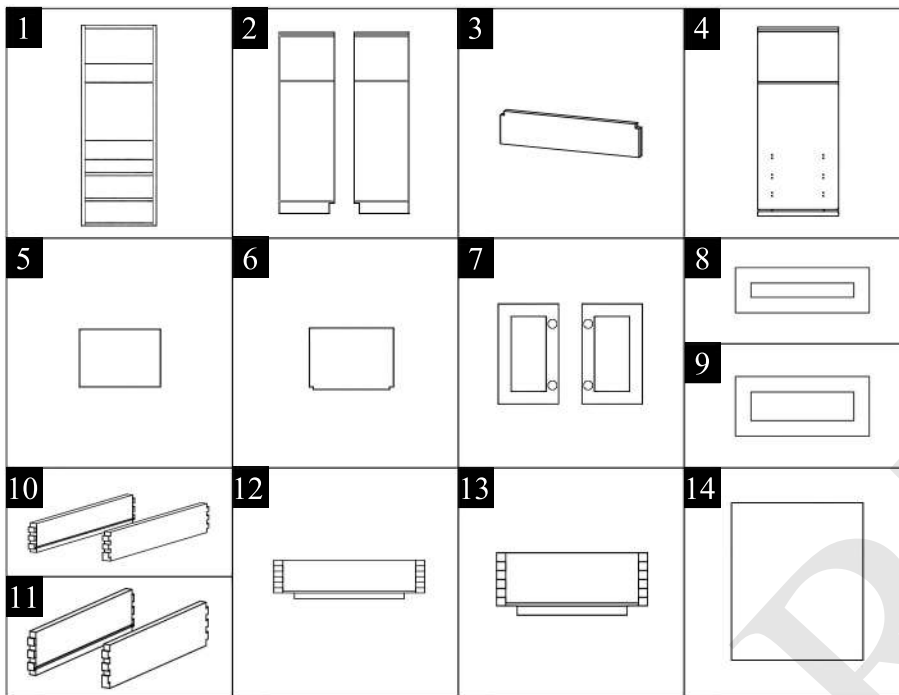


- 1** Face Frame
- 2** Side Panel
- 3** Toe Kick
- 4** Back Panel
- 5** Shelves
- 6** Top & Bottom & Middle Panel
- 7** Door
- 8** Top Drawer Front Panel
- 9** Bottom Drawer Front Panel x2
- 10** Top Drawer Sides Panel x2
- 11** Bottom Drawer Sides Panel x4
- 12** Top Drawer Back Panel
- 13** Bottom Drawer Back Panel x2
- 14** Drawer Botom Panel x3

Hardware list

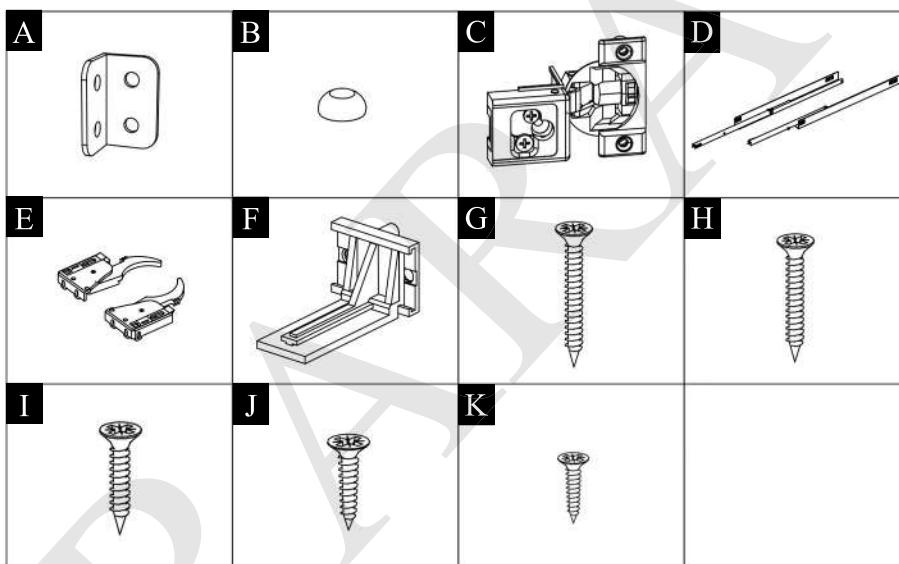


- A** Metal L Brackets
- B** Clear Rubber Bumpers
- C** Hinges
- D** Drawer Glides
- E** L/R Locking Drawer Glides
- F** Glide Rail Brackets
- G** Large Screws 1 3/16"
- H** Medium Large Screws 1"
- I** Medium Screws 5/8"
- J** Small Screws 9/16"
- K** Small Screws 15/32"

Tools Required

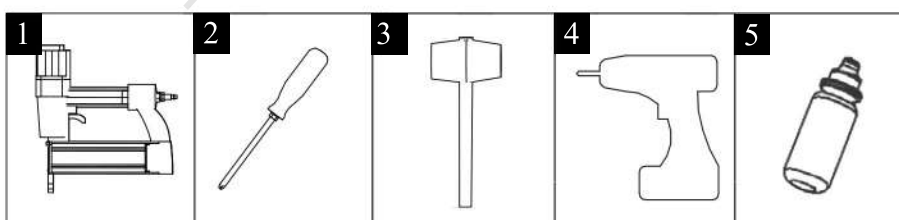


- 1** Nailer
- 2** Screwdriver
- 3** Rubber Mallet
- 4** Drill
- 5** Glue


Step1: Position the Back Panel on a flat surface. Position the Glide Rail Brackets and secure them using the Small Screws.

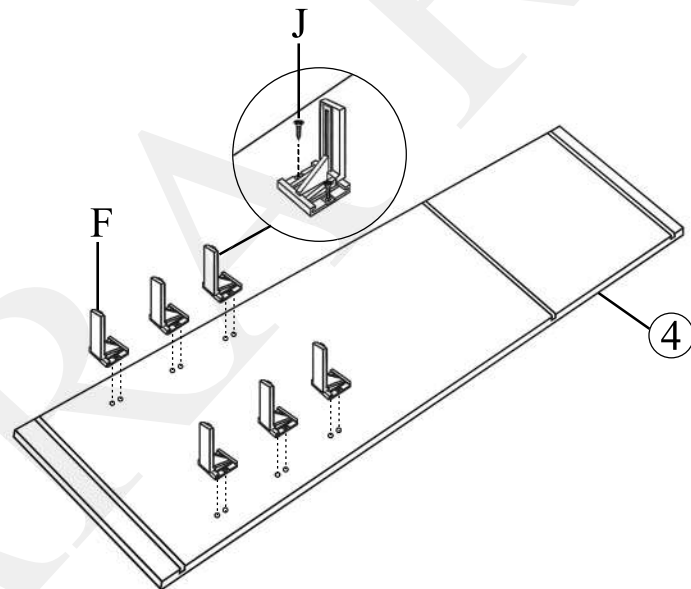


Step2: Apply glue to the grooves of the Side Panels.

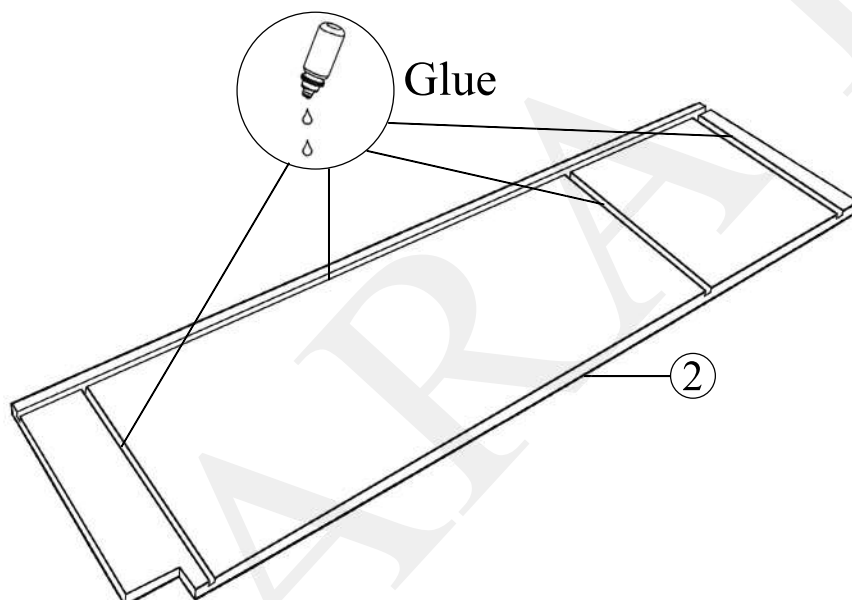


Step3: Position the Back Panel onto the Side Panel and align the panels with the grooves.

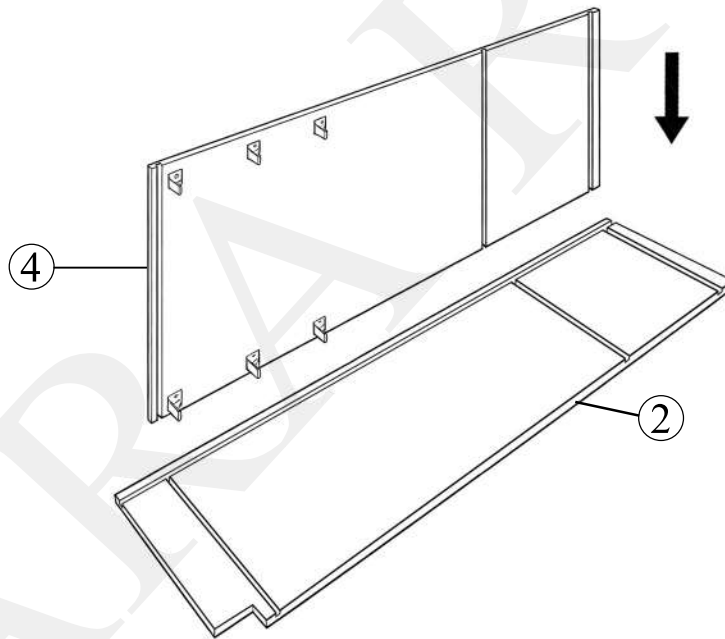


Step4: Insert the Top, Bottom and Middle Panels into the grooves of the cabinet assembly.

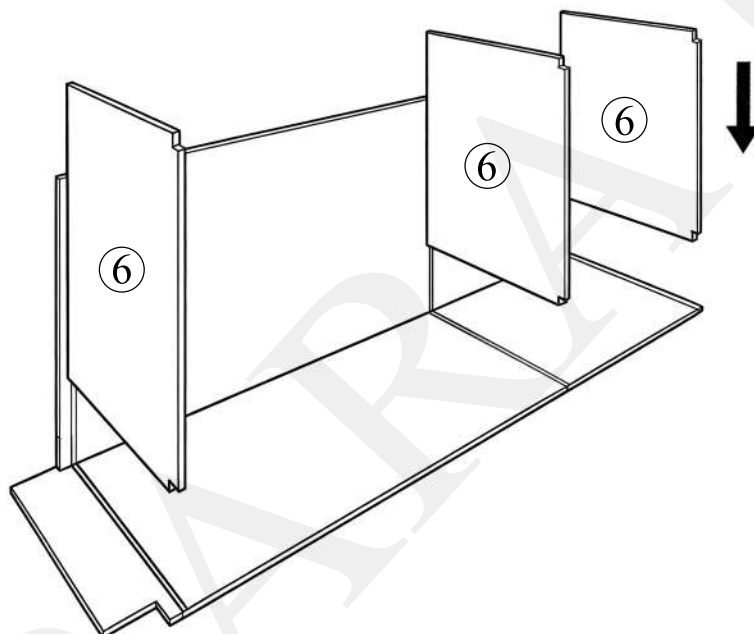


Step5: Secure the Back Panel with Top/Bottom/Middle Panels using the Large Screws and a drill.

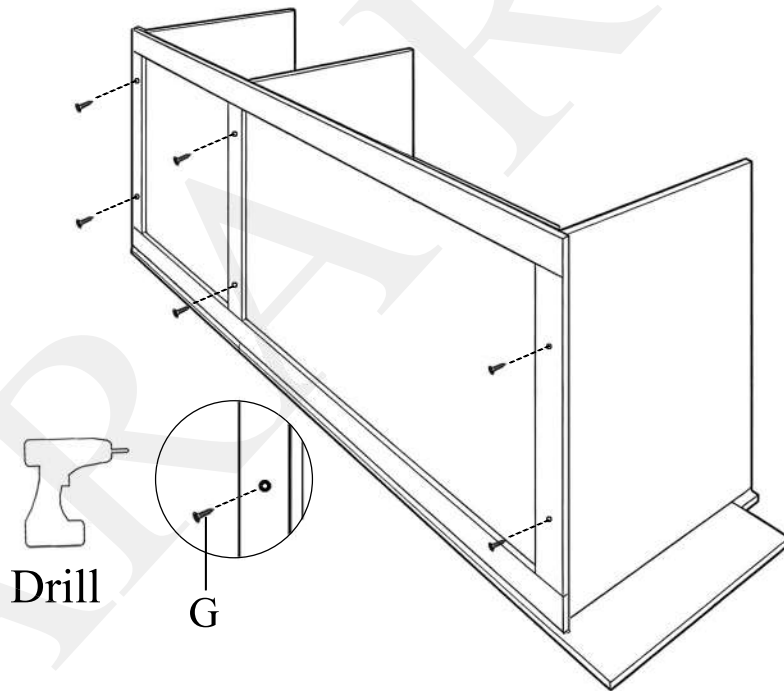


Step6: Position the another Side Panel onto the cabinet assembly, align it with the grooves.

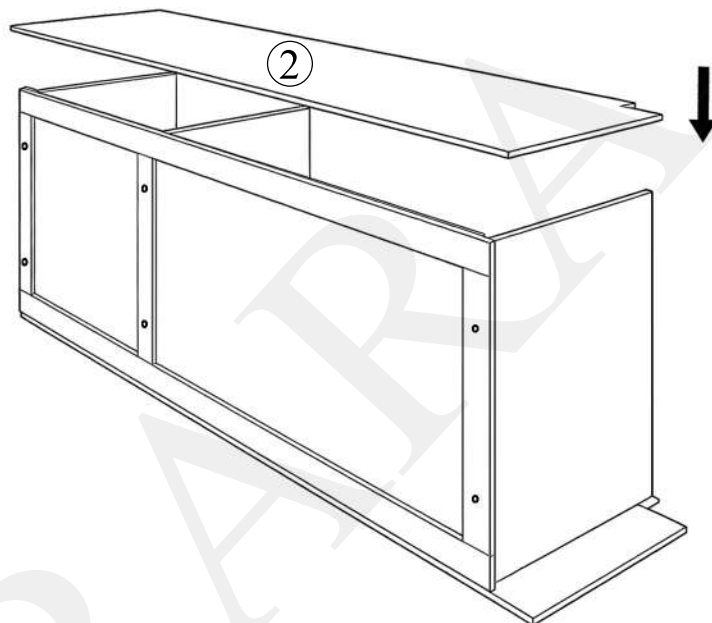


Step7: Secure the cabinet assembly to the Side Panels using a nailer.

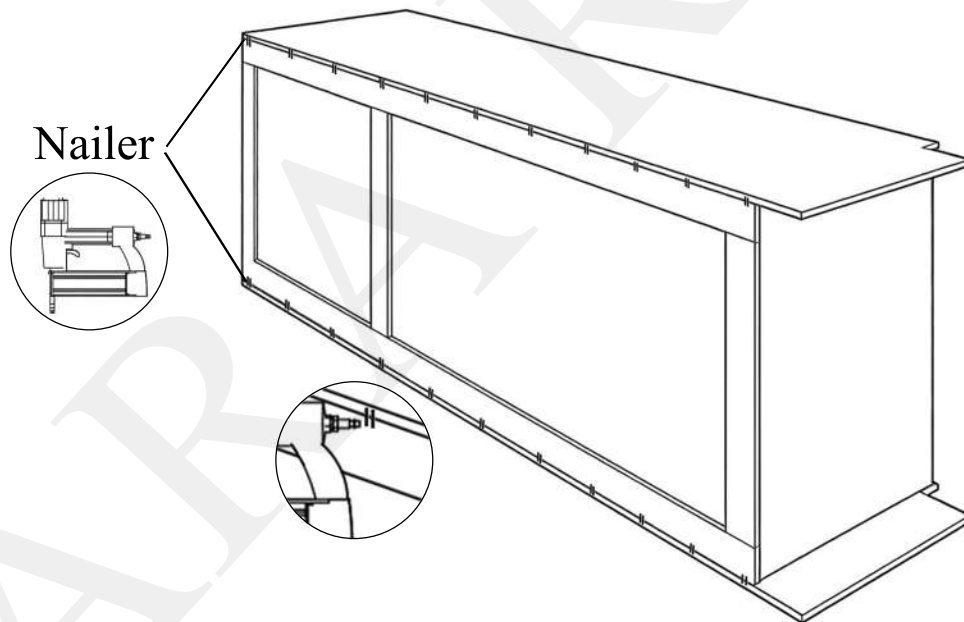


Step8: Slide the Toe Kick into the cabinet assembly.

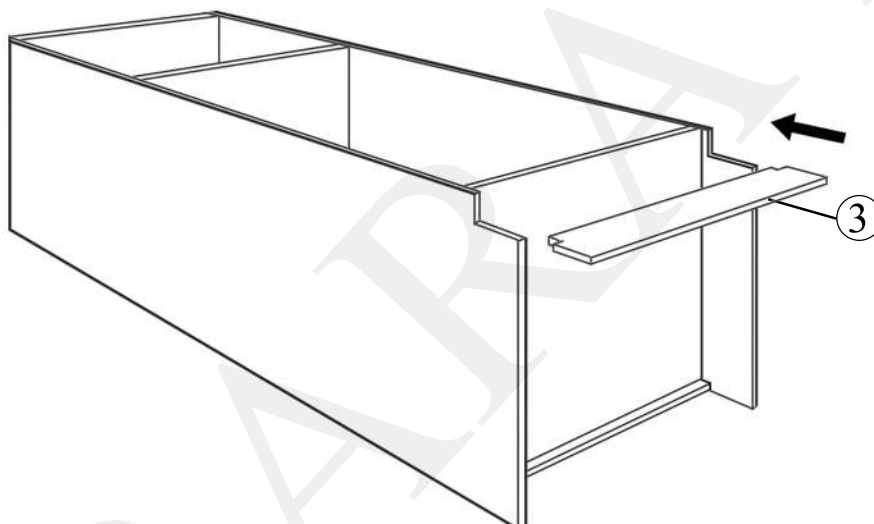


Step9: Secure the Toe Kick to the cabinet assembly using a nailer.

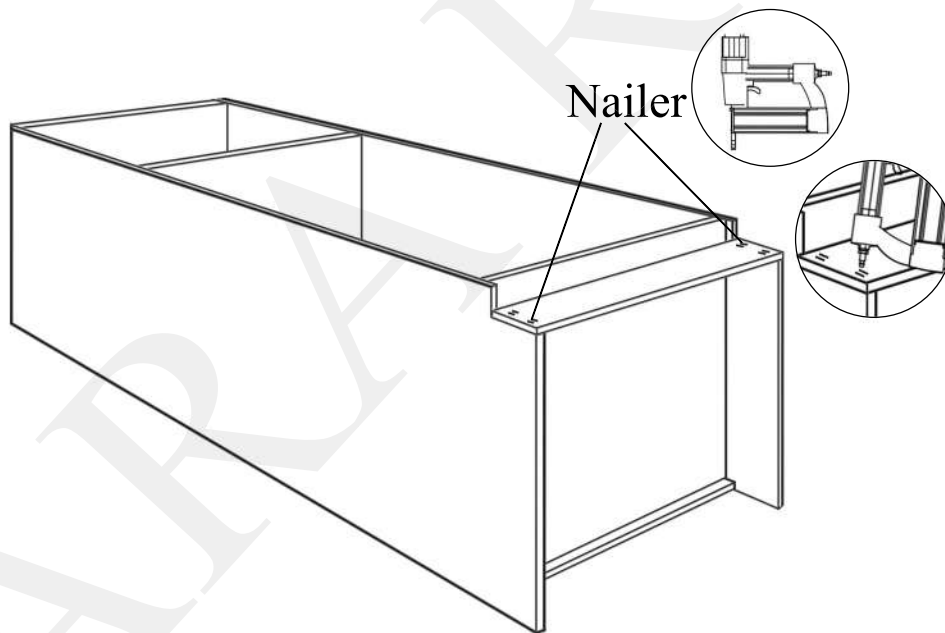


Step10: Apply glue to the joints of the Face Frame.

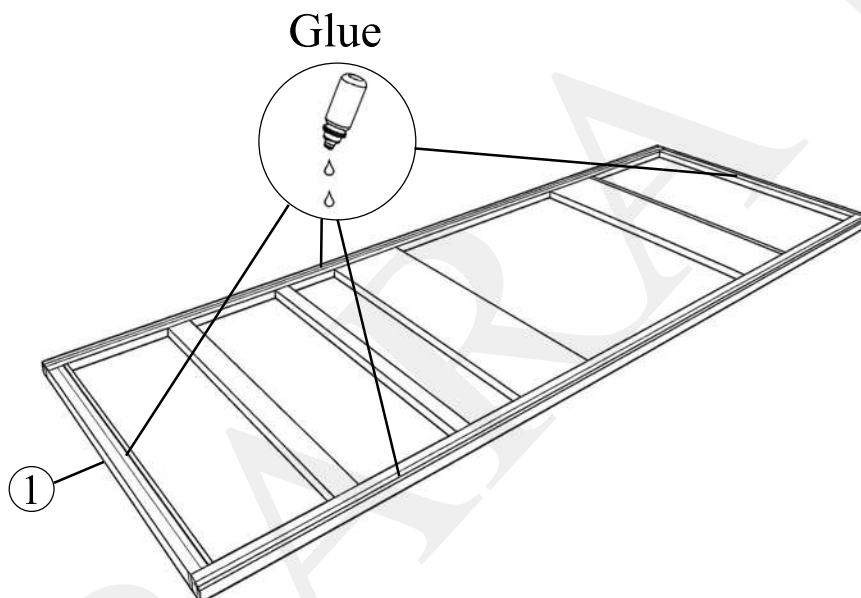


Step11: Position the Face Frame onto the cabinet assembly and align it with the cabinet edges.

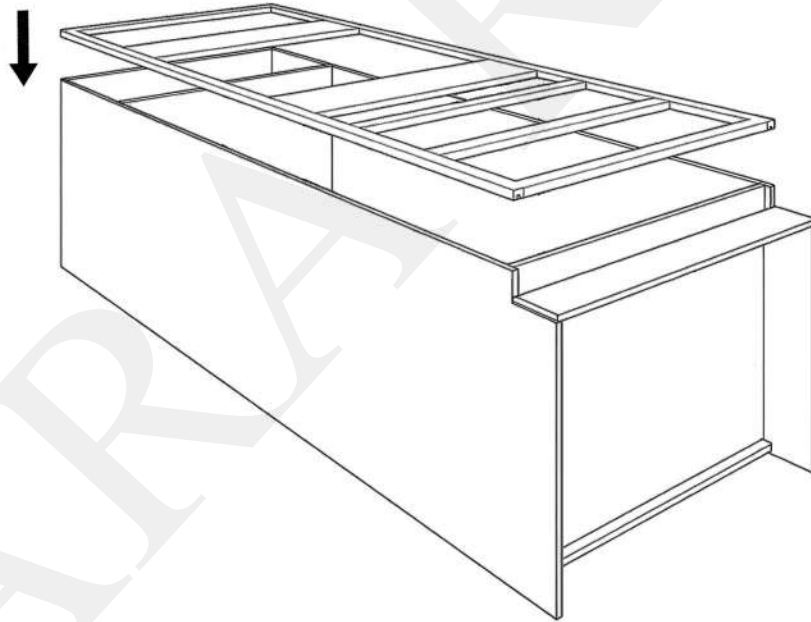


Step12: Secure the Face Frame to the cabinet assembly using a nailer.

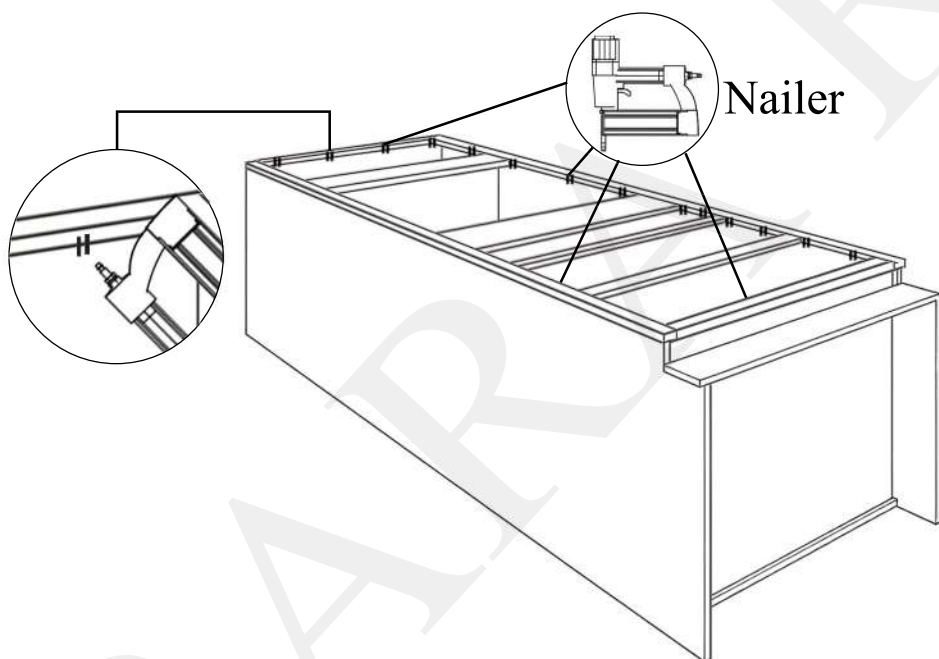


Step13: Position the Hinges on the Doors. Secure the hinges using a drill.

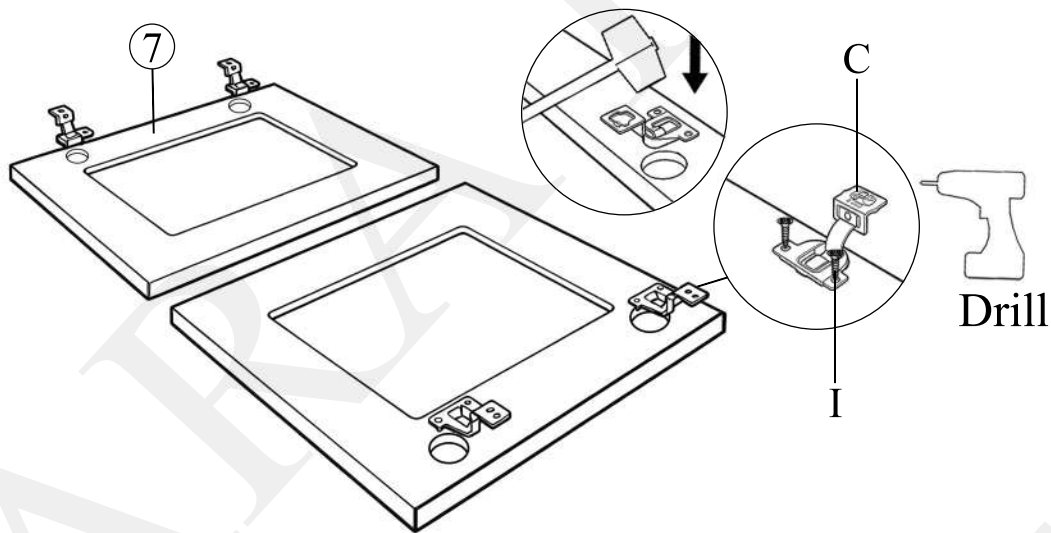


Step14: Position the Doors on the Face Frame and align the hinges with the pre-drilled holes. Secure the hinges using the Medium Large Screws. Put on the Clear Rubber Bumpers.

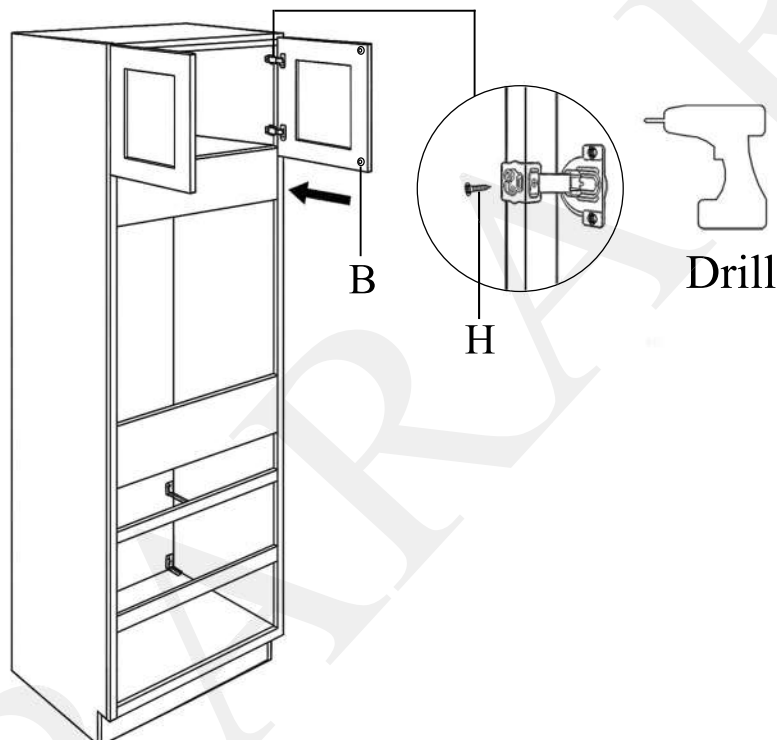


Step15: Position the Metal L Brackets on the Shelf. Secure the brackets using the Small Screws and a drill.

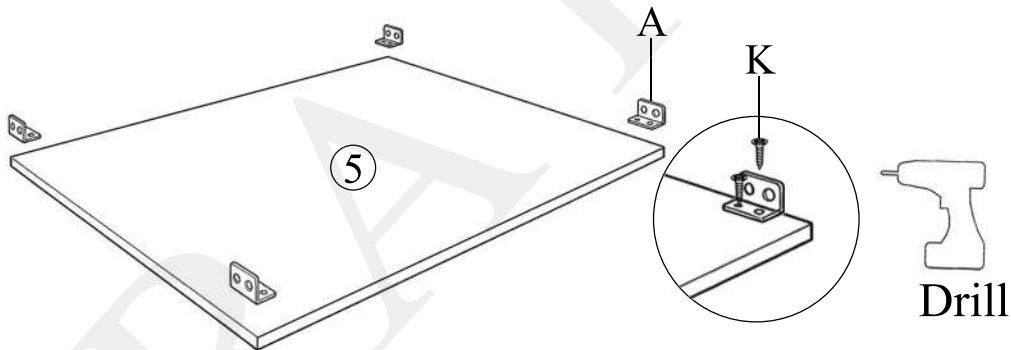


Step16: Position the Shelf inside the cabinet and slide it into place.

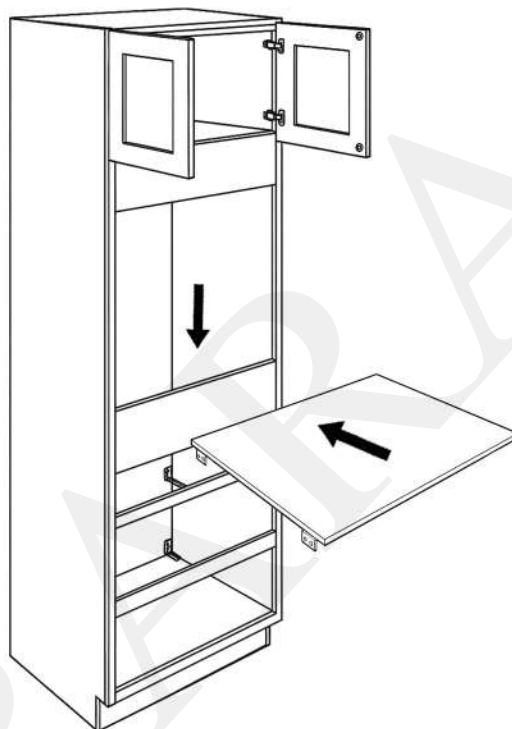



Step17: Secure the brackets using the Small Screws and a drill.

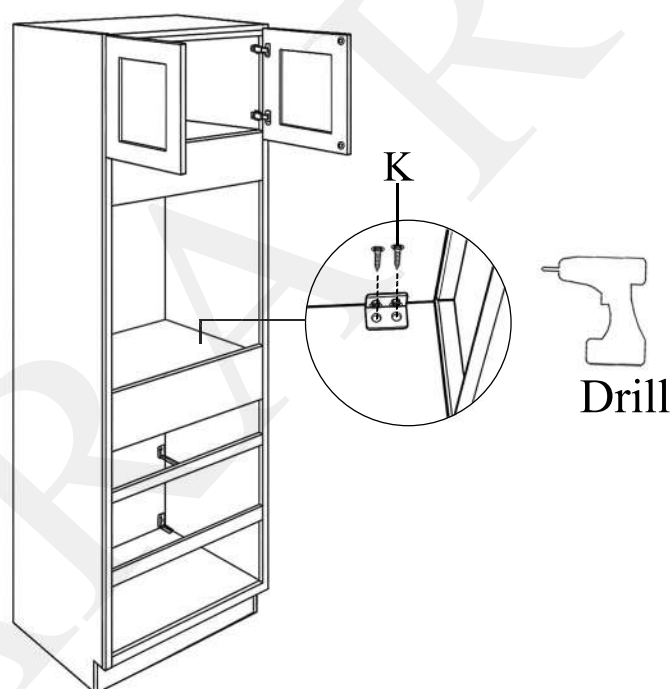


Step18: Install the Drawer Glides on the Glide Rail Brackets. Secure the glides using the Medium Screws.

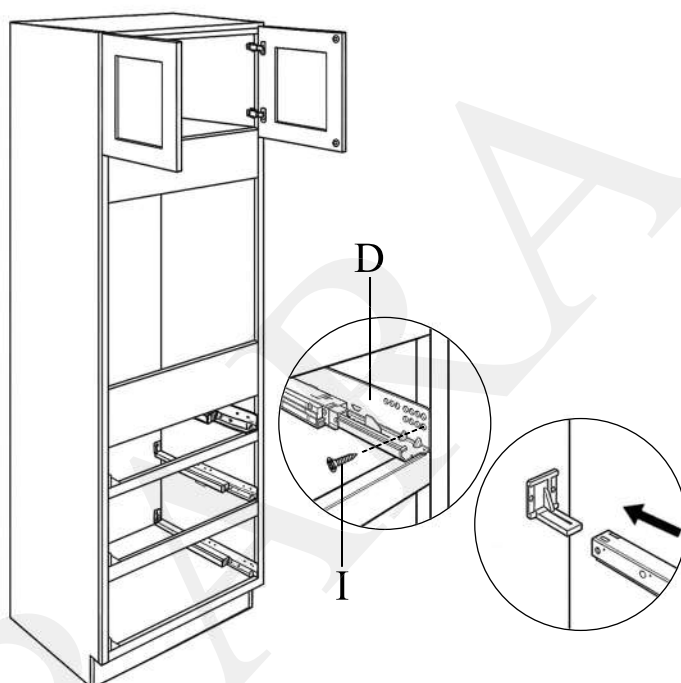


Step19: Position the Drawer Side Panels and Drawer Back Panel onto the Drawer Bottom Panel Tap the panels into place using a Rubber Mallet.

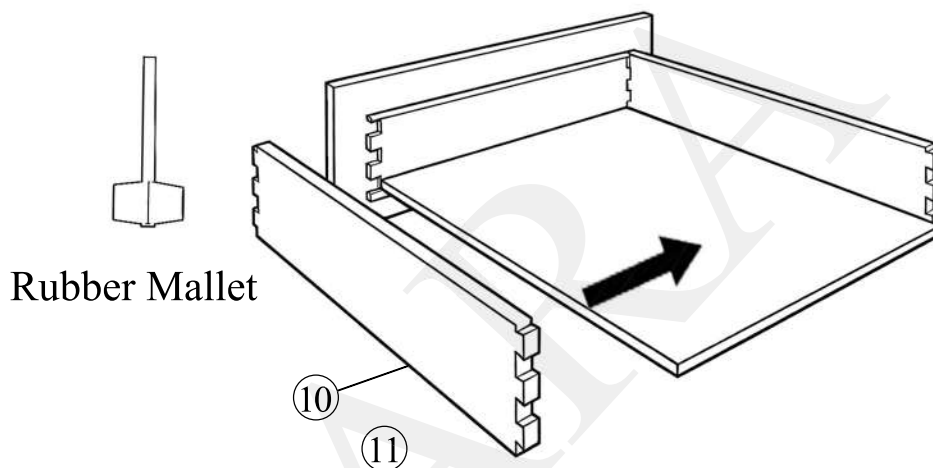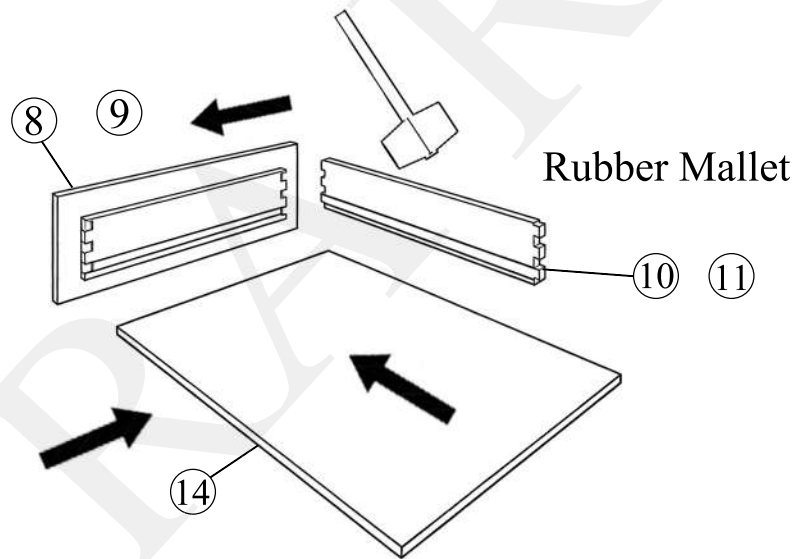


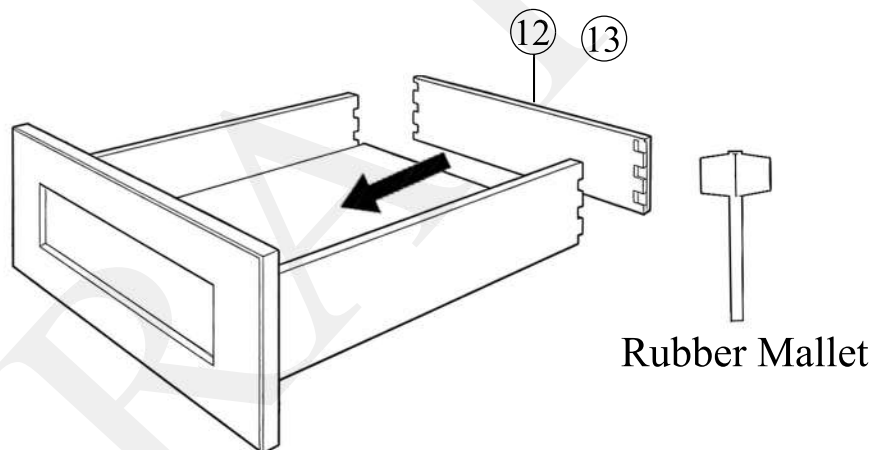


Step22: Attach the L/R Locking Drawer Glides to the drawer assembly. Secure the glides using the Small Screws. Put on the Clear Rubber Bumpers on the drawer front.

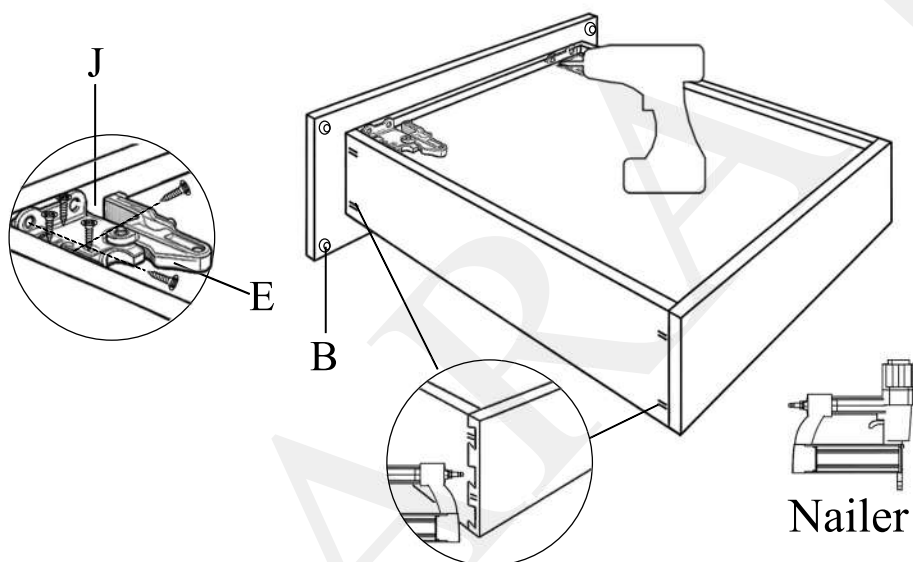

Step23: Pull the Drawer Glides fully out. Position the drawer on the glides and slide it into the cabinet until the locking mechanism engages.

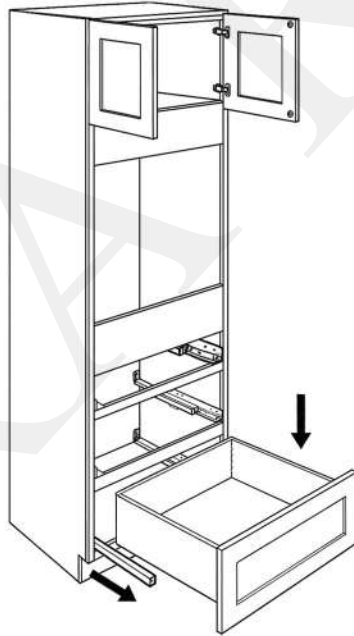

Step24: Repeat Step 23 to install the remaining drawers.

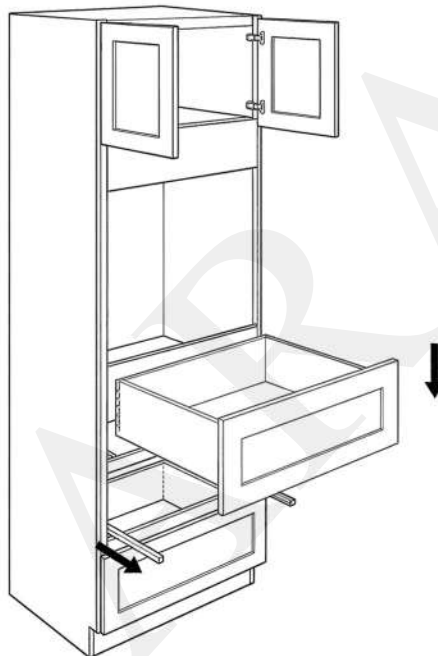

Step25: Repeat Step 23 to install the remaining drawers.

