


ASSEMBLY INSTRUCTION

BASE CABINET WITH SINGLE DOOR & DRAWER

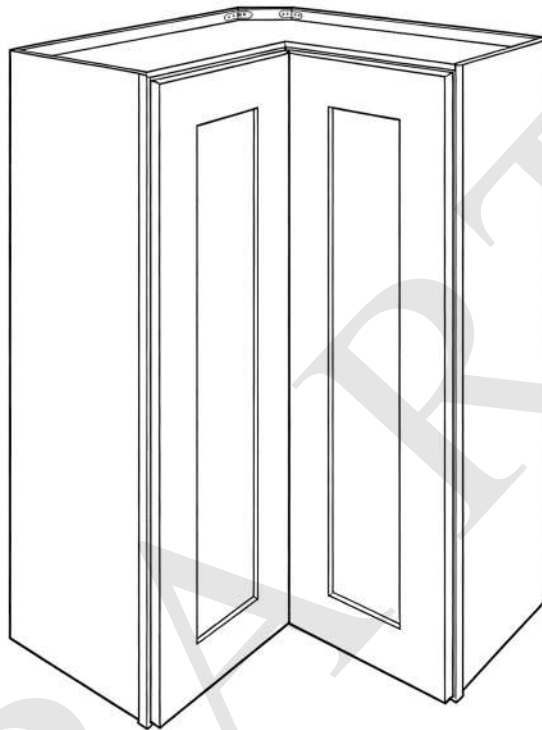

Cabinet Model

WLS2430, WLS2436, WLS2442

Cabinet Style

Shaker Door Style Framed Cabinets



NOTE*

See our cabinet assembly videos on our YouTube Channel

<http://www.youtube.com/@rarartacabinets>


Inspect all panels and hardware to ensure you have everything needed.

We recommend laying the panels on flat soft base to protect the finish when assembling.

Pre-Sales: service@rarartacabinets.com


After-Sales: logistics@rarartacabinets.com

Parts List

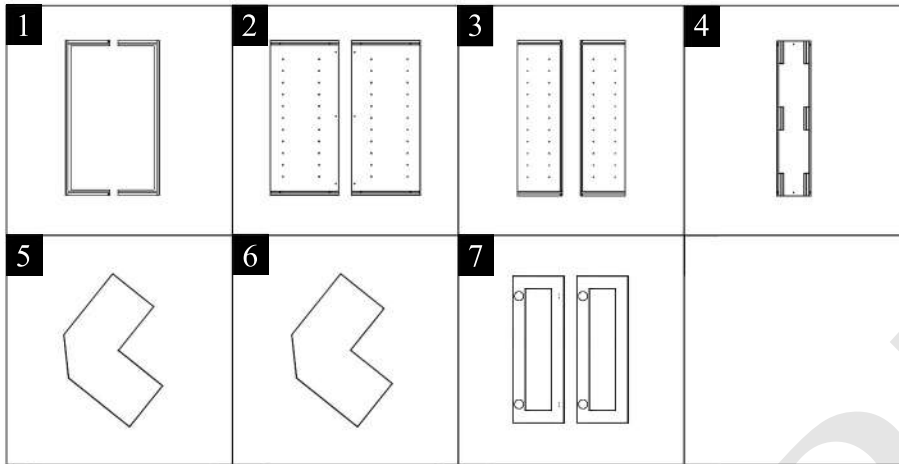


- 1** Face Frame
- 2** Back Side Panel x2
- 3** Front Side Panel x2
- 4** Back Panel
- 5** Shelves x2 or x3
- 6** Top & Bottom Panel
- 7** Door x2

Hardware list

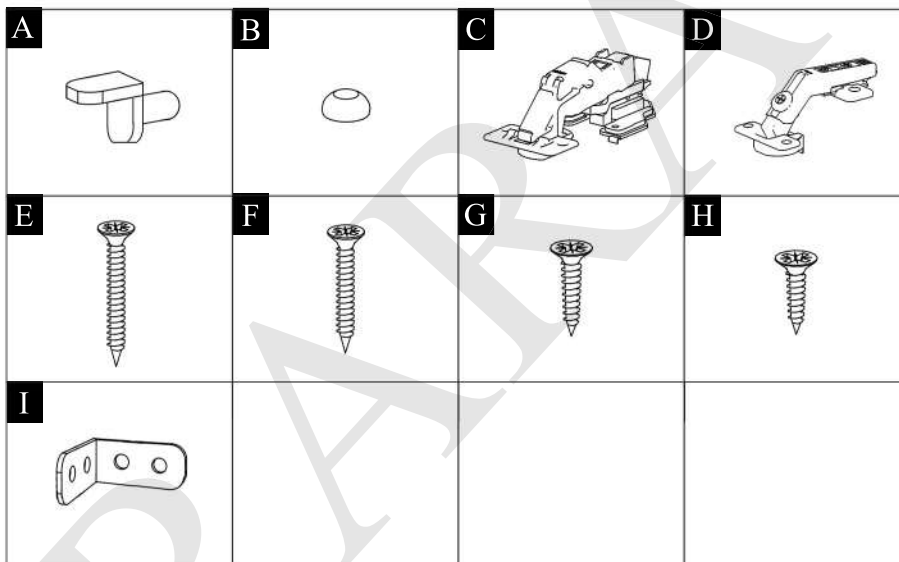


- A** Shelf Pins
- B** Clear Rubber Bumpers
- C** 165° Hinges x2 or x3
- D** 135° Hinges x2 or x3
- E** Large Screws 1 3/16"
- F** Medium Large Screws 1"
- G** Medium Screws 5/8"
- H** Small Screws 9/16"
- I** Metal L Brackets

Tools Required

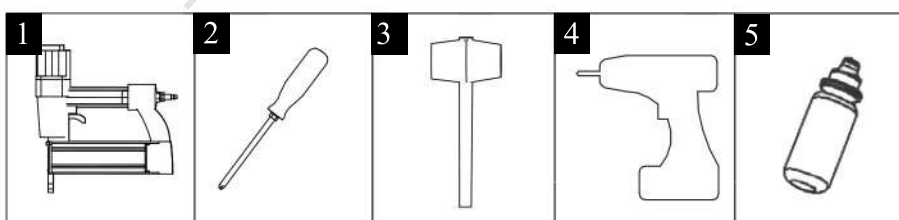


- 1** Nail Gun
- 2** Screwdriver
- 3** Rubber Mallet
- 4** Drill
- 5** Glue


Step1: Insert the Back Side Panel into the groove of the Back Panel.

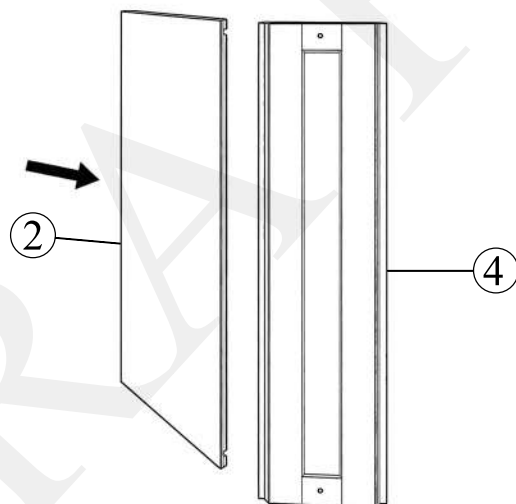


Step2: Secure the First Back Side Panel and The Back Panel using a nailer, as shown. Insert the Second Back Side Panel into the Back Panel.

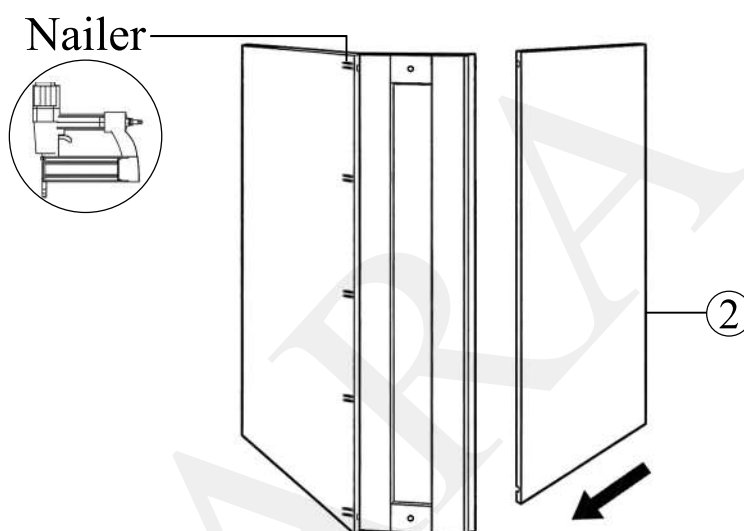


Step3: Secure The Second Back Side Panel.

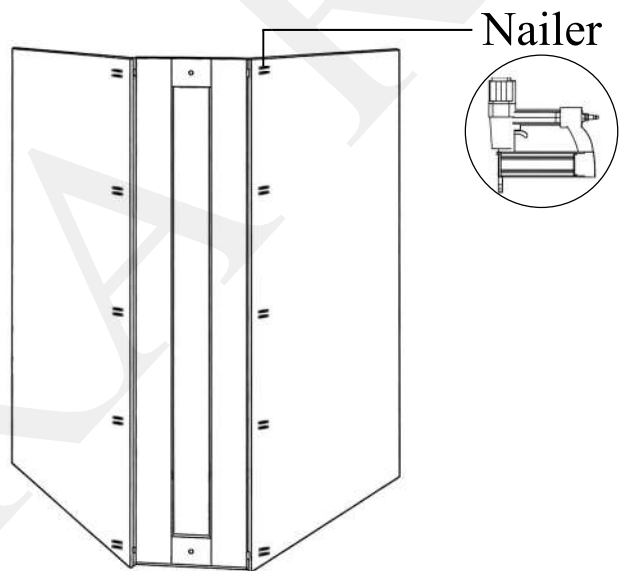


Step4: Apply glue to the joints of the Panels. Position the Metal L Brackets as shown and secure them with the Small Screws using a drill.

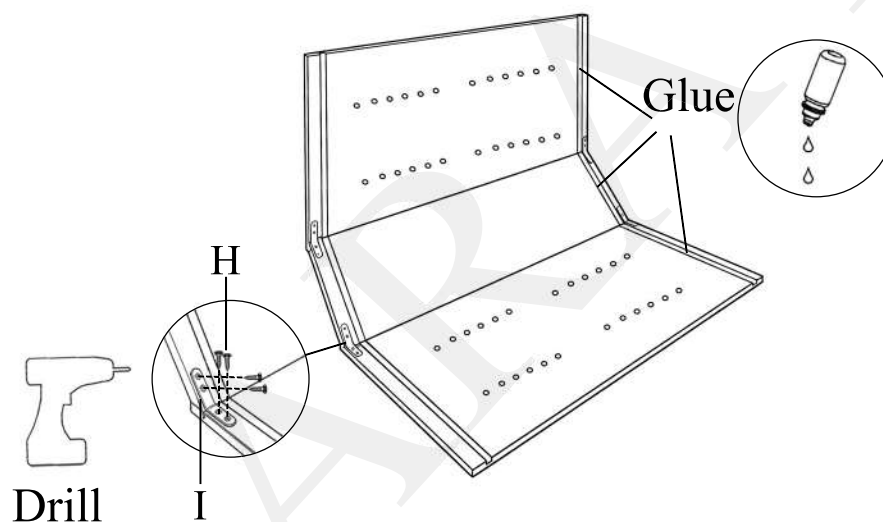


Step5: Apply glue to the grooves of the Front Side Panels.

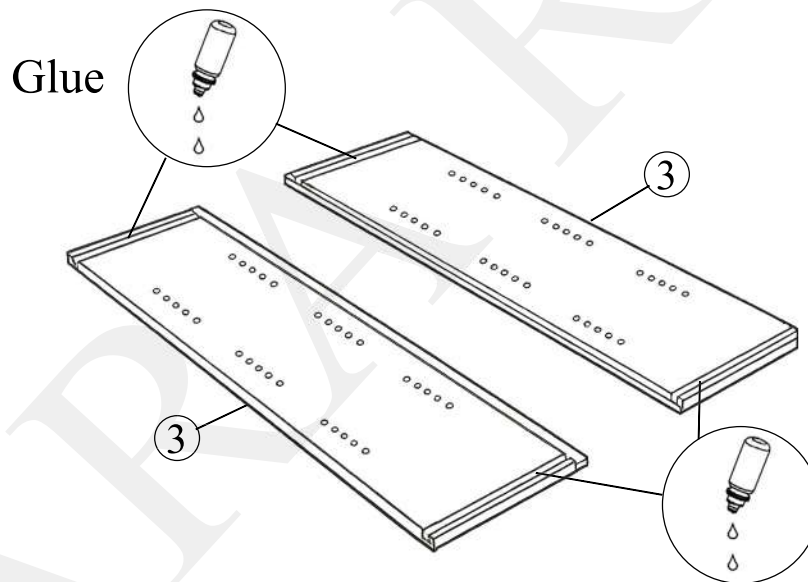


Step6: Insert the Front Side Panels into the grooves of the cabinet assembly.

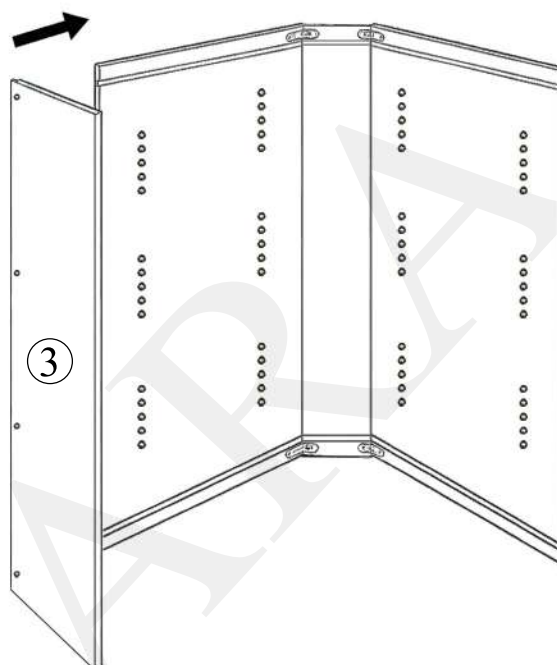


Step7: Secure the Front Side Panels to the cabinet assembly using the Large Screws and a drill.

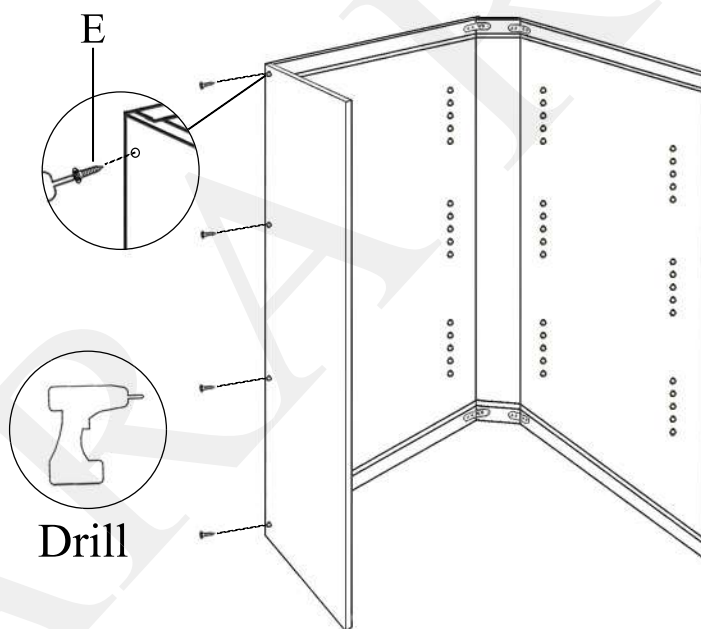


Step8: Position the Top and Bottom Panels in the cabinet assembly and align them with the grooves.

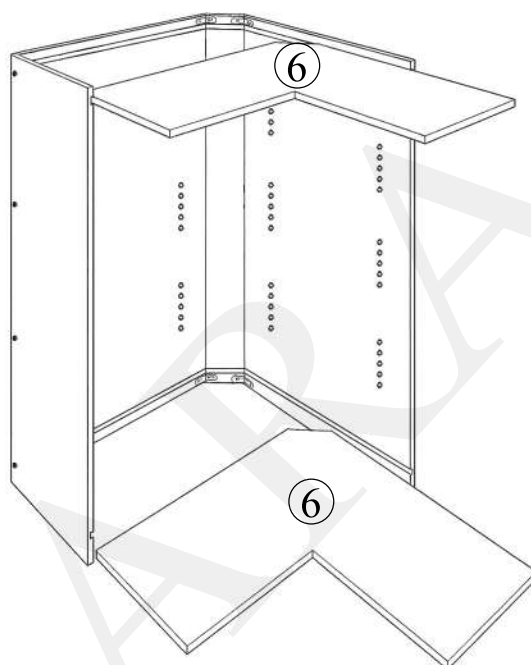


Step9: Secure the Front Side Panel using a nailer.

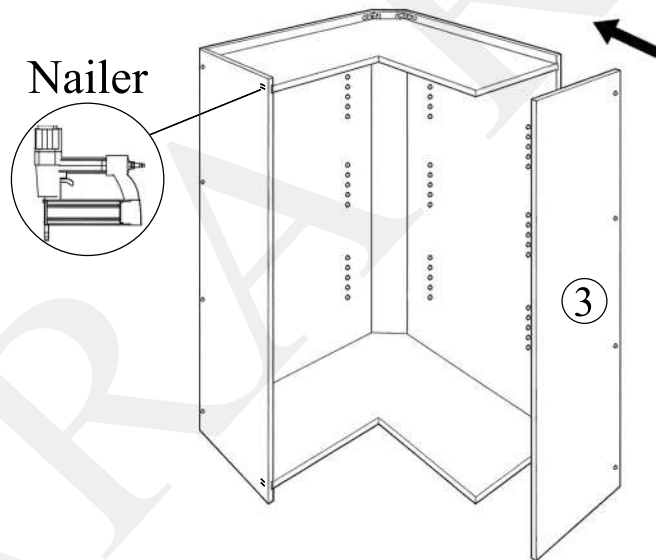


Step10: Secure the Front Side Panel to the cabinet assembly using the Large Screws and a nailer.

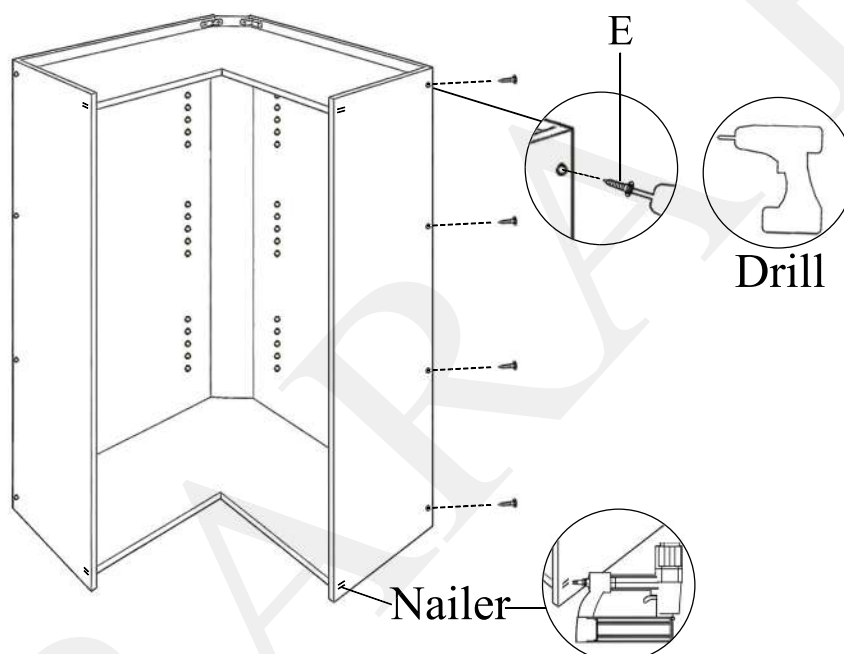


Step11: Secure the Back Panel to the Top & Bottom Panels using the Large Screws and a drill.

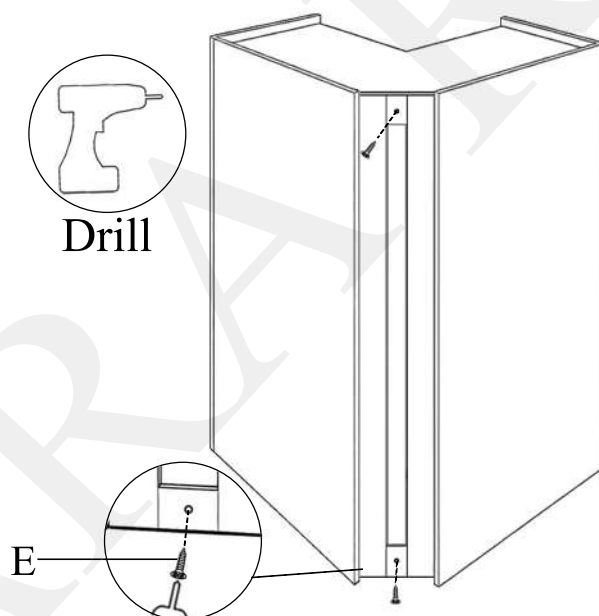


Step12: Apply glue to the joints of the Face Frame. Position the frame sections and secure them using the Large Screws and a drill.

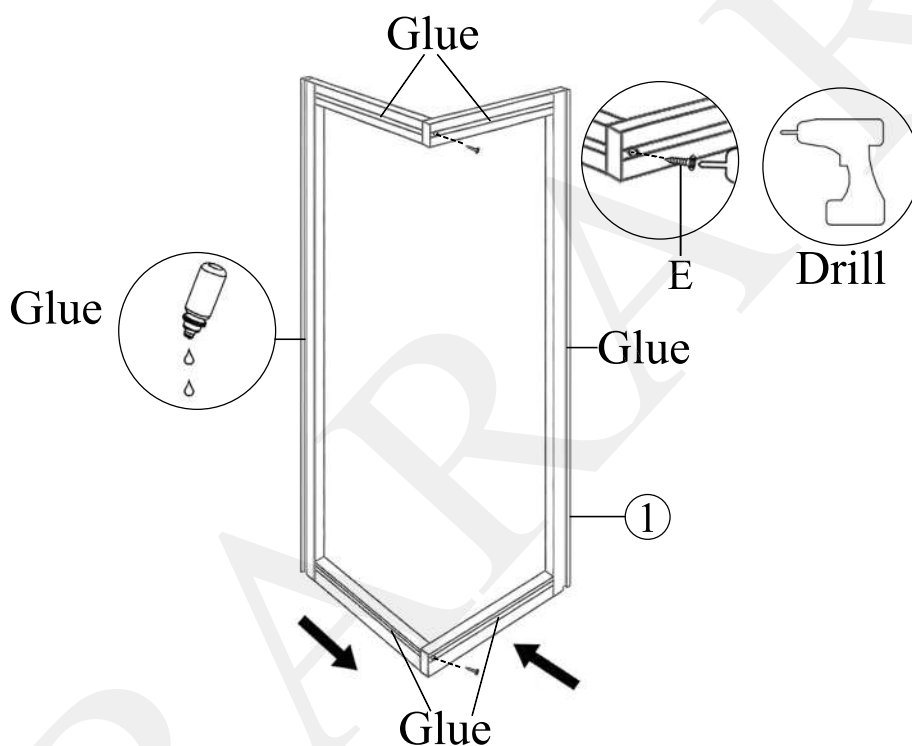


Step13: Position the Face Frame onto the cabinet assembly and align it with the cabinet edges.

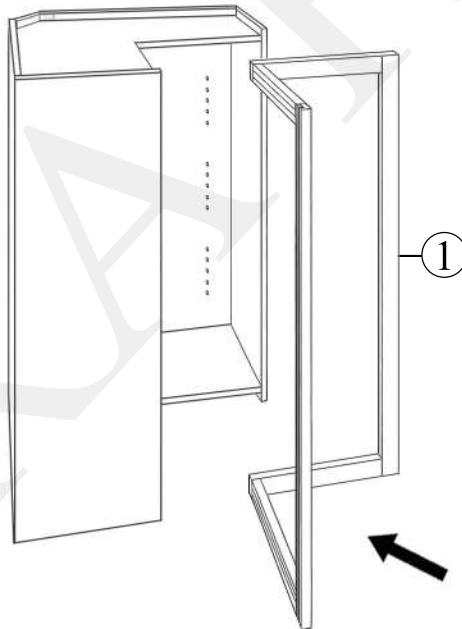


Step14: Secure the Face Frame to the cabinet assembly using a nailer.

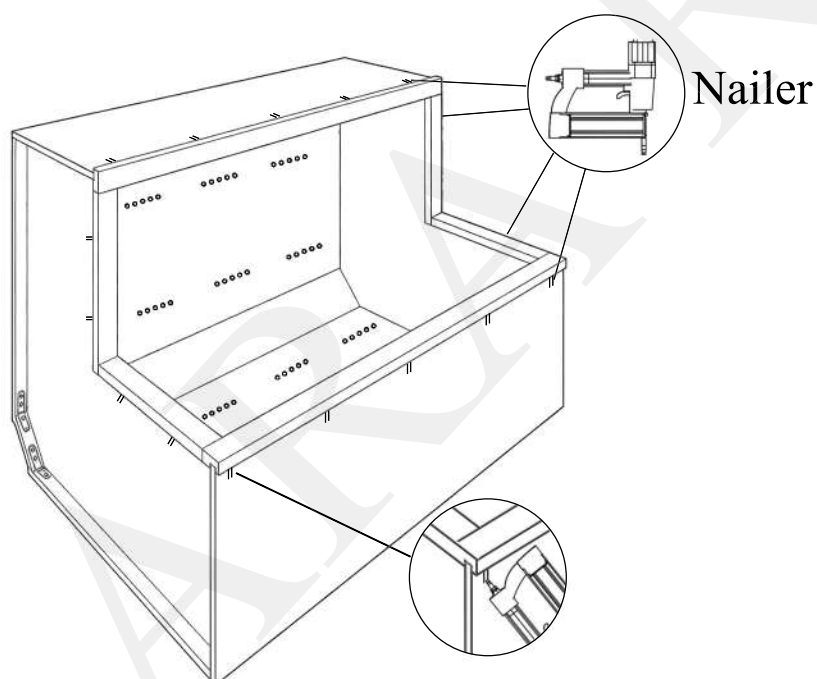


Step15: Insert the Shelf Pins into the pre-drilled holes.

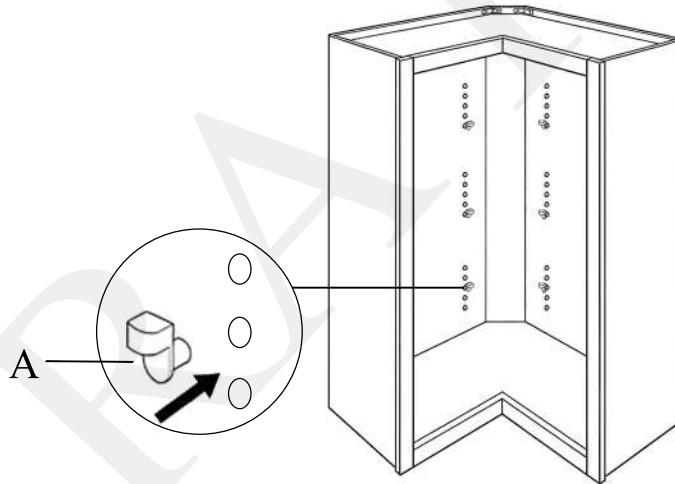


Step16: Slide the Shelves into the cabinet and rest them on the Shelf Pins.

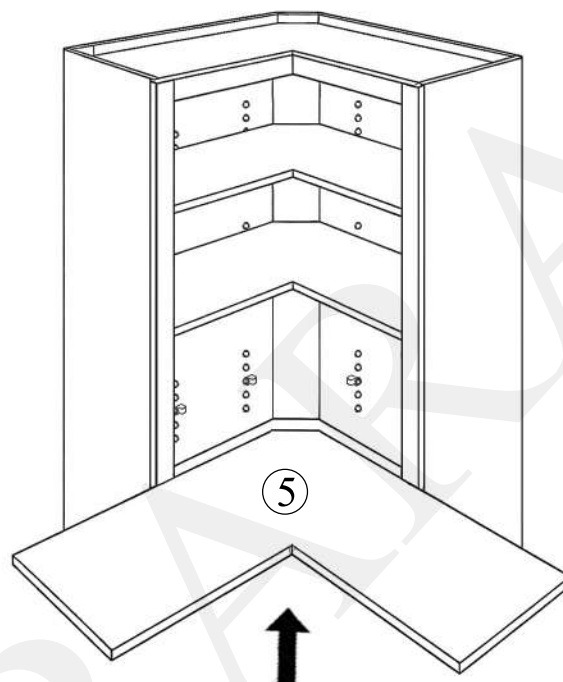


Step17: Assemble the 135° hinges. Secure the hinge components using a drill.

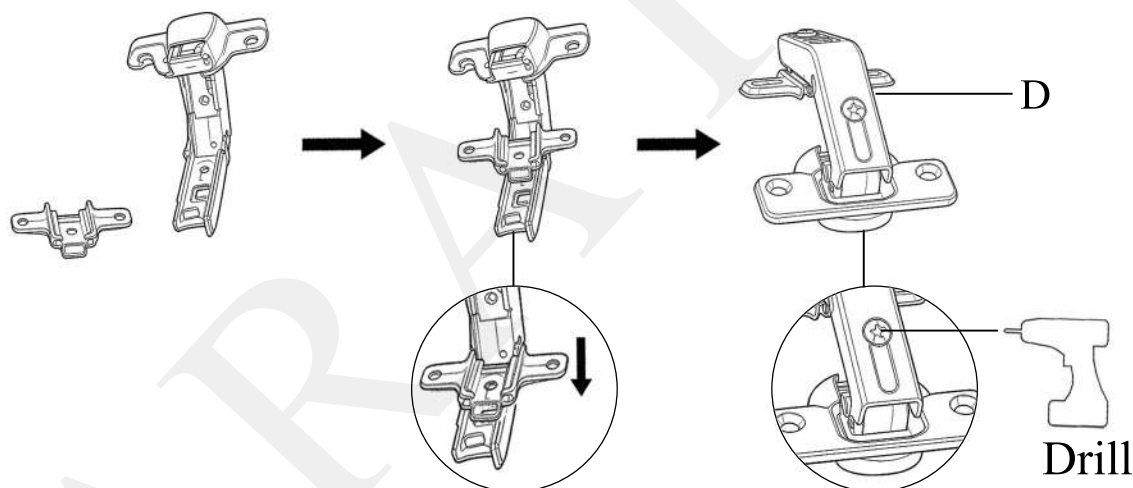

Step18: Position the 165° and 135° hinges on the Door. Secure the hinges using the Medium Large Screws and Medium Screws.

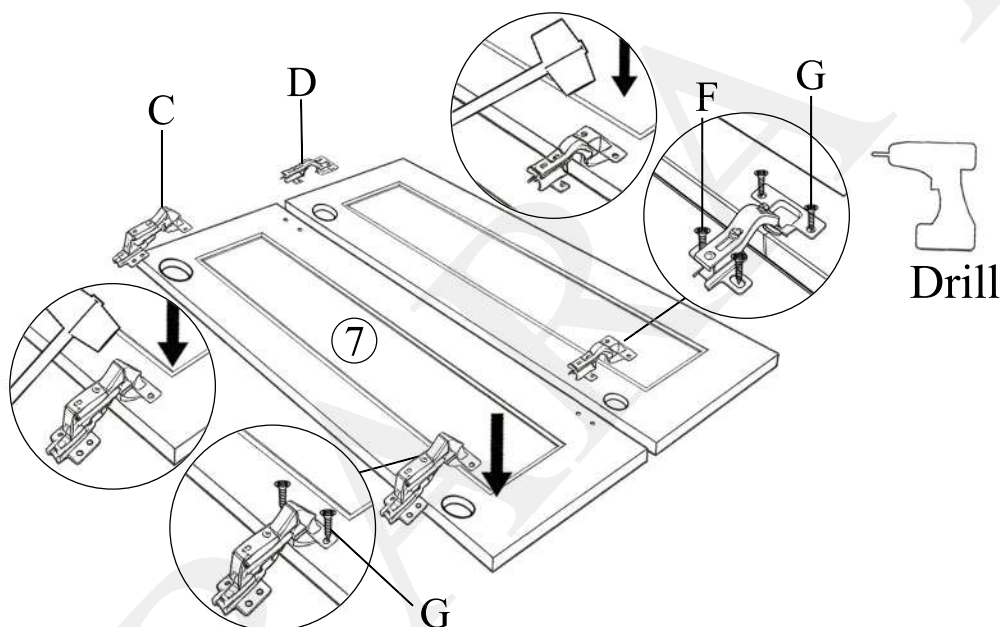

Step19: Position the Door on the Face Frame and align the hinges with the pre-drilled holes. Secure the hinges using the Medium Large Screws and a drill. And then install the Clear Rubber Bumpers.

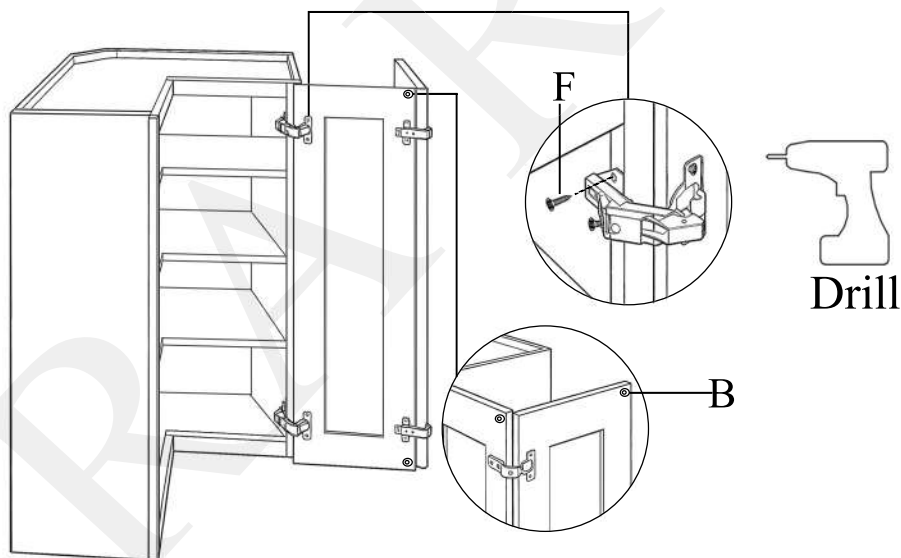

Step20:

